

WELL Pod3

WIRELESS EVENT LED LUMINAIRE

User Manual



*White cover sold separately

Model ID: WELLPOD3

Edition Notes

The WELL POD 3 User Manual includes a description, safety precautions, installation, programming, operation, and maintenance instructions for the WELL POD 3 as of the release date of this edition.

Trademarks

Chauvet, Chauvet Professional, the Chauvet logo, WELL, and WELL POD are registered trademarks or trademarks of Chauvet & Sons, LLC (d/b/a Chauvet and Chauvet Lighting) in the United States and other countries. Other company and product names and logos referred to herein may be trademarks of their respective companies.

Copyright Notice

The works of authorship contained in this manual, including, but not limited to, all designs, text, and images are owned by Chauvet.

© Copyright 2025 Chauvet & Sons, LLC. All rights reserved.

Electronically published by Chauvet in the United States of America.

Manual Use

Chauvet authorizes its customers to download and print this manual for professional information purposes only. Chauvet expressly prohibits the usage, copy, storage, distribution, modification, or printing of this manual or its content for any other purpose without written consent from Chauvet.

Document Printing

For best results, print this document in color, on letter size paper (8.5 x 11 in), double-sided. If using A4 paper (210 x 297 mm), configure the printer to scale the content accordingly.

Intended Audience

Any person installing, operating, and/or maintaining this product should completely read through the guide that shipped with the product, as well as this manual, before installing, operating, or maintaining this product.

Disclaimer

Chauvet believes that the information contained in this manual is accurate in all respects. However, Chauvet assumes no responsibility and specifically disclaims any and all liability to any party for any loss, damage, or disruption caused by any errors or omissions in this document, whether such errors or omissions result from negligence, accident, or any other cause. Chauvet reserves the right to revise the content of this document without any obligation to notify any person or company of such revision. However, Chauvet has no obligation to make, and does not commit to make, any such revisions.

Document Revision

Go to www.chauvetprofessional.com for the latest version.

| Revision | Date | Description |
|----------|---------|-----------------|
| 1 | 04/2025 | Initial release |

TABLE OF CONTENTS

1. Before You Begin 1

 What Is Included 1

 Claims 1

 Text Conventions 1

 Symbols 1

 Safety Notes..... 2

 Battery Charge Notes..... 3

 Storage Notes 3

 FCC Statement of Compliance 4

 RF Exposure Warning for North America and Australia..... 4

 Expected LED Lifespan..... 4

2. Introduction 5

 Features 5

 Charging Case Overview 5

 Charging Case Dimensions 6

 Product Overview..... 6

 Product Dimensions..... 7

 Accessory Overview..... 8

 Accessory Dimensions..... 8

3. Setup 9

 AC Power..... 9

 AC Plug 9

 Fuse Replacement..... 9

 Power Linking..... 9

 DMX Linking..... 10

 DMX Personalities..... 10

 Remote Device Management..... 10

 Master/Slave Connectivity..... 10

 Lumenradio CRMX™ Connection 10

 Receiver Configuration 10

 Transmitter Configuration 11

 USB Software Update 12

 Charging Case USB Software Update 12

 Mounting 13

 Orientation..... 13

 Rigging 13

 Procedure..... 13

 Detachable Split Yokes 14

4. Operation 16

 Control Panel Description 16

 Control Options 16

 Programming..... 16

 Home Screen 16

 Control Panel Lock..... 16

 Passcode 16

| | |
|--|-----------|
| Menu Map | 17 |
| DMX Configuration..... | 19 |
| DMX Personalities..... | 19 |
| Starting Address..... | 19 |
| DMX Channel Assignments and Values | 20 |
| Control Chart..... | 20 |
| Color Macro Chart..... | 20 |
| Color Temperature Chart | 20 |
| Control Chart..... | 20 |
| 12 Ch / 8 Ch / 5 Ch | 21 |
| Standalone Configuration..... | 21 |
| Static Mode | 21 |
| Fixed Color..... | 21 |
| Color Temperature..... | 21 |
| Manual Color Mixer..... | 21 |
| Auto Show | 21 |
| Settings Configuration..... | 22 |
| Master/Slave | 22 |
| Dimmer Curve | 22 |
| Dimmer Speed Mode | 22 |
| White Balance | 22 |
| Pulse Width Modulation | 22 |
| Power Loss Mode | 22 |
| Run Time Mode..... | 22 |
| Display Backlight..... | 22 |
| Information | 22 |
| Beep Alarm | 23 |
| Factory Reset..... | 23 |
| Radio Frequency Configuration | 24 |
| RF Setting | 24 |
| RF Controller Operation | 24 |
| Error Codes..... | 24 |
| 5. Maintenance..... | 25 |
| Product Maintenance | 25 |
| 6. Technical Specifications | 26 |
| Contact Us | 27 |
| Warranty & Returns..... | 27 |

Before You Begin

1. Before You Begin

What Is Included

- (4) WELL POD 3
- (1) Charging case
- (4) Omega brackets
- (4) Detachable split yokes
- (1) RF controller
- Quick Reference Guide

Claims

Carefully unpack the product immediately and check the container to make sure all the parts are in the package and are in good condition.

If the box or the contents (the product and included accessories) appear damaged from shipping, or show signs of mishandling, notify the carrier immediately, not Chauvet. Failure to report damage to the carrier immediately may invalidate a claim. In addition, keep the box and contents for inspection.

For other issues, such as missing components or parts, damage not related to shipping, or concealed damage, file a claim with Chauvet within 7 days of delivery.

Text Conventions

| Convention | Meaning |
|----------------------|--|
| 1–512 | A range of values |
| 50/60 | A set of values of which only one can be chosen |
| Settings | A menu option not to be modified |
| <ENTER> | A key to be pressed on the product's control panel |

Symbols

| Symbol | Meaning |
|---|---|
|  | Electrical warning. Not following these instructions may cause electrical damage to the product, accessories, or the user. |
|  | Critical installation, configuration, or operation information. Not following these instructions may make the product not work, cause damage to the product, or cause harm to the operator. |
|  | Pinch point warning. Not following these instructions may result in damage to, or loss of, tools, digits, or limbs. |
|  | Important installation or configuration information. The product may not function correctly if this information is not used. |
|  | Useful information. |



Any reference to data or power connections in this manual assumes the use of Seetronic IP-rated cables.

The term “DMX” used throughout this manual refers to the USITT DMX512-A digital data transmission protocol.



Connection of the control signal: DMX line

- The product has XLR sockets for DMX input and output.
- **Notice:** This control circuit is isolated and belongs to the Class 2 data port. The control circuit has a cumulative leakage current of less than 3.5 mA.

Safety Notes

Read all the following safety notes before working with this product. These notes contain important information about the installation, usage, and maintenance of this product.



This product contains no user-serviceable parts. Any reference to servicing in this User Manual will only apply to properly trained, certified technicians. Do not open the housing or attempt any repairs.



All applicable local codes and regulations apply to proper installation of this product.

- The luminaire is intended for professional use only.
- The luminaire should be positioned so that prolonged staring into the luminaire at a distance closer than 1.6 ft (0.5 m) is not expected.
- If the external flexible cable or cord of this luminaire is damaged, it shall be replaced by a special cord or cord exclusively available from the manufacturer or its service agent.
- The light source contained in this luminaire shall only be replaced by the manufacturer or its service agent or a similar qualified person.
- **CAUTION:**
 - This product's housing may be hot when operating. Mount this product in a location with adequate ventilation, at least 20 in (50 cm) from adjacent surfaces.
 - When transferring the product from extreme temperature environments, (e.g., cold truck to warm humid ballroom) condensation may form on the internal electronics of the product. To avoid causing a failure, allow the product to fully acclimate to the surrounding environment before connecting it to power.
 - Flashing light is known to trigger epileptic seizures. User must comply with local laws regarding notification of strobe use.
- **ALWAYS:**
 - Disconnect from power before cleaning the product or replacing the fuse.
 - When using an IP65-rated product in an outdoor environment, use IP65- (or higher) rated power and data cable.
 - Replace and secure IP-rated protective covers to all power, data, USB, or other ports when not in use.
 - Replace the fuse with the same type and rating.
 - Use a safety cable when mounting this product overhead.
 - Connect this product to a grounded and protected circuit.
- **DO NOT:**
 - Open this product. It contains no user-serviceable parts.
 - Look at the light source when the product is on.
 - Leave any flammable material within 50 cm of this product while operating or connected to power.
 - Connect this product to a dimmer or rheostat.
 - Operate this product if the housing, lenses, or cables appear damaged.
 - Submerge this product (adhere to standards for the published IP rating). Regular outdoor operation is fine.
 - Permanently install outdoors in locations with extreme environmental conditions. This includes, but is not limited to:
 - Exposure to a marine/saline environment (within 3 miles of a saltwater body of water).
 - Locations where normal temperatures exceed the temperature ranges in this manual.
 - Locations that are prone to flooding or being buried in snow.
 - Other areas where the product will be subject to extreme radiation or caustic substances.
 - **ONLY** use the hanging/mounting bracket to carry this product.
 - The maximum ambient temperature is 113 °F (45 °C). Do not operate this product at higher temperatures.
 - The minimum startup temperature is -14°F (-10°C). Do not start the product at lower temperatures.
 - To eliminate unnecessary wear and improve its lifespan, during periods of non-use completely disconnect the product from power via breaker or by unplugging it.
 - In the event of a serious operating problem, stop using immediately.



If this Chauvet product requires service, contact Chauvet Technical Support.

Before You Begin

Battery Charge Notes

Rechargeable lithium-ion batteries are potentially hazardous and can present a serious FIRE HAZARD, SERIOUS INJURY, and/or PROPERTY DAMAGE if damaged, defective, or improperly used.

- **ALWAYS:**

- Charge using a manufacturer-provided charger while the product is powered off.
- Charge the battery in temperatures between 32°–95°F (0°–35°C).
- Allow a depleted battery to charge for a few minutes before turning on the product. If the battery is completely discharged, the device cannot be turned on immediately when the charger is connected.
- Keep at least 3 ft (1 m) distance to any heat source and away from flammable materials.
- Keep batteries away from children.
- Store batteries between 40–60% charge.
- Follow local regulations when disposing of batteries.
- Replace with an authentic Chauvet battery.



- **DO NOT:**

- Continue charging if the battery becomes hot, smokes, swells, or gives off an odor during charging.
- Leave the product unattended while charging.
- Deplete the battery below 10%.
- Charge the battery in a closed container.
- Charge for more than 24 hours.



CAUTION! Fixture must be powered off before placing in the case!

- WELL POD 3 fixtures will shut off automatically when placed in the charging case, but it is recommended to turn off the power manually to prevent potential damage.



Ensure the USB-C port cover is closed and the foot is fully retracted before placing the product in the charging case. Not doing so may result in an incomplete charging connection.

Storage Notes

Follow the instructions below when storing the WELL POD 3:

- Store charged product(s) in a dry environment, away from direct sunlight.
- Charge or discharge the battery to approximately 50% of capacity before storage.
- Lithium-ion batteries continue to slowly discharge (self-discharge) when not in use or while in storage. Routinely check the battery's charge status.
- Store the battery at temperatures between 41 °F and 68 °F (5 °C and 20 °C).

FCC Statement of Compliance

This device complies with Part 15 Part B of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Warning for North America and Australia

Warning! This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and the user. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Expected LED Lifespan



Over time, use and heat will gradually reduce LED brightness. Clustered LEDs produce more heat than single LEDs, contributing to shorter lifespans if always used at full intensity. The average LED lifespan is 40,000 to 50,000 hours. To extend LED lifespan, maintain proper ventilation around the product, and limit the overall intensity.

2. Introduction


Features

- A fully realized kit of (4) battery operated black IP65-rated par style fixtures, with (19) RGB warm white LEDs, and a beam angle of 12.7 degrees
- Battery run time selections of 5, 8, 12, and 18 hours of operation at full output
- Built-in battery charger allows fixture to operate while charging
- Built-in IP65 5-pin DMX in/out allows for wired data
- Built-in Seetronic IP65 PowerKon input/output
- Control over DMX, CRMX, RDM, or RF
- Easy connection to WELL COM and WELL COM 2 boxes for app control
- USB-C port for convenient software updates
- Removable split yoke for both hanging and floor standing
- Pressure-equalizing M6 Gore valve
- Built-in safety cable attachment point
- Easy-to-read OLED display
- Built-in theft alarm (audio and visual notification)
- Built-in PWM adjustment
- Included RF remote
- Included 4 pack charging case


Charging Case Overview

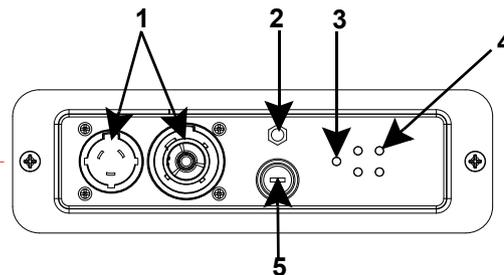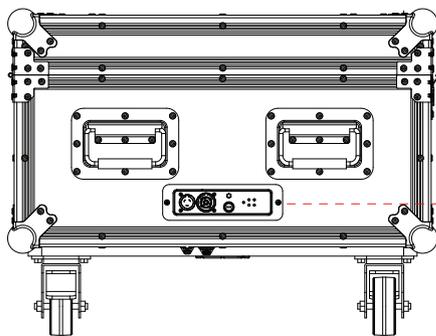


| # | Name |
|---|--------------------------|
| 1 | Power in/out |
| 2 | Condensation valve |
| 3 | Power indicator light |
| 4 | Battery Indicator lights |
| 5 | Fuse holder |
| 6 | WELL POD |
| 7 | Handles |

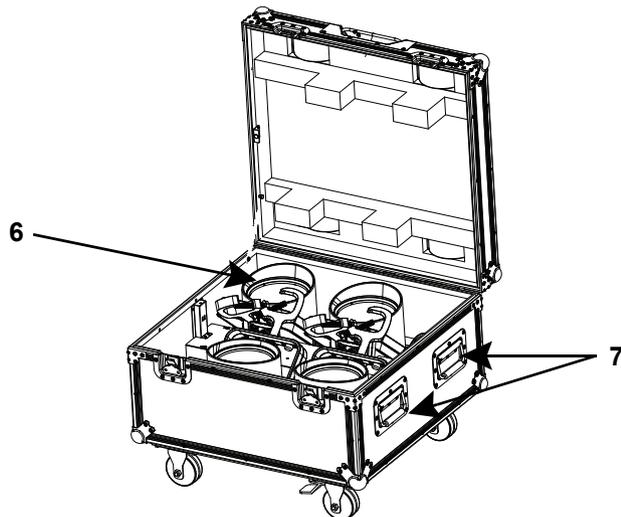

Charging Case Dimensions

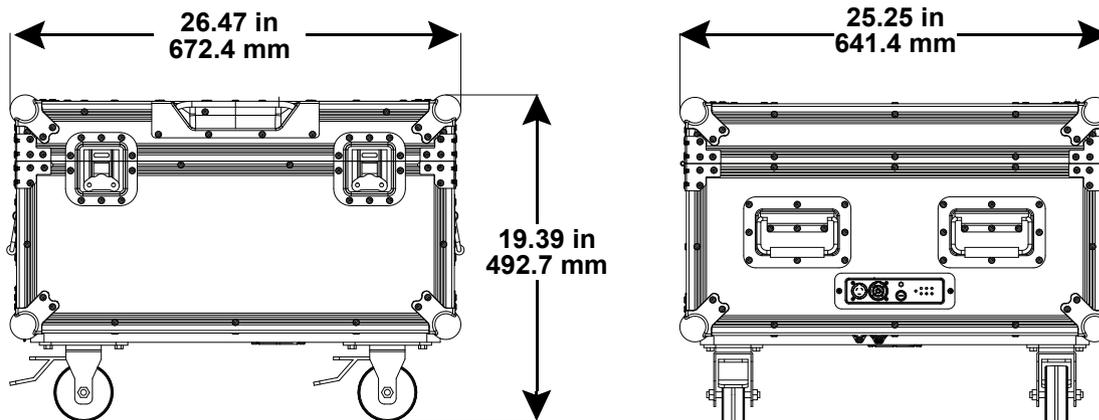


Product Overview

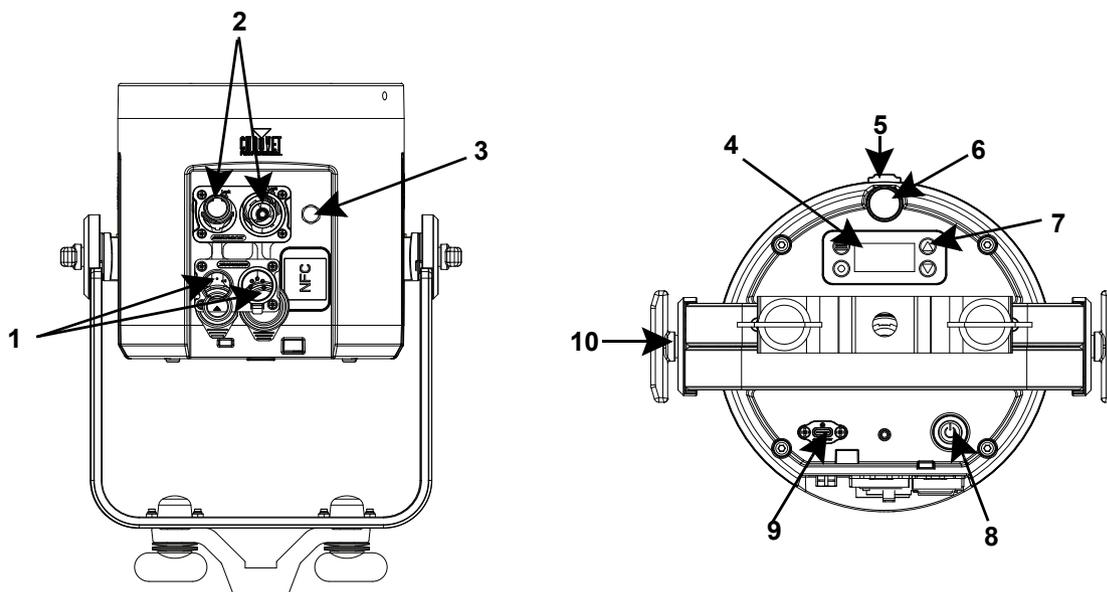


| # | Name | # | Name |
|---|--------------------|----|-------------------------|
| 1 | Power in/out | 6 | Foot |
| 2 | 5-pin DMX in/out | 7 | Menu buttons |
| 3 | Condensation valve | 8 | Power button |
| 4 | Display screen | 9 | USB-C port |
| 5 | Foot latch button | 10 | Bracket adjustment knob |


Product Dimensions

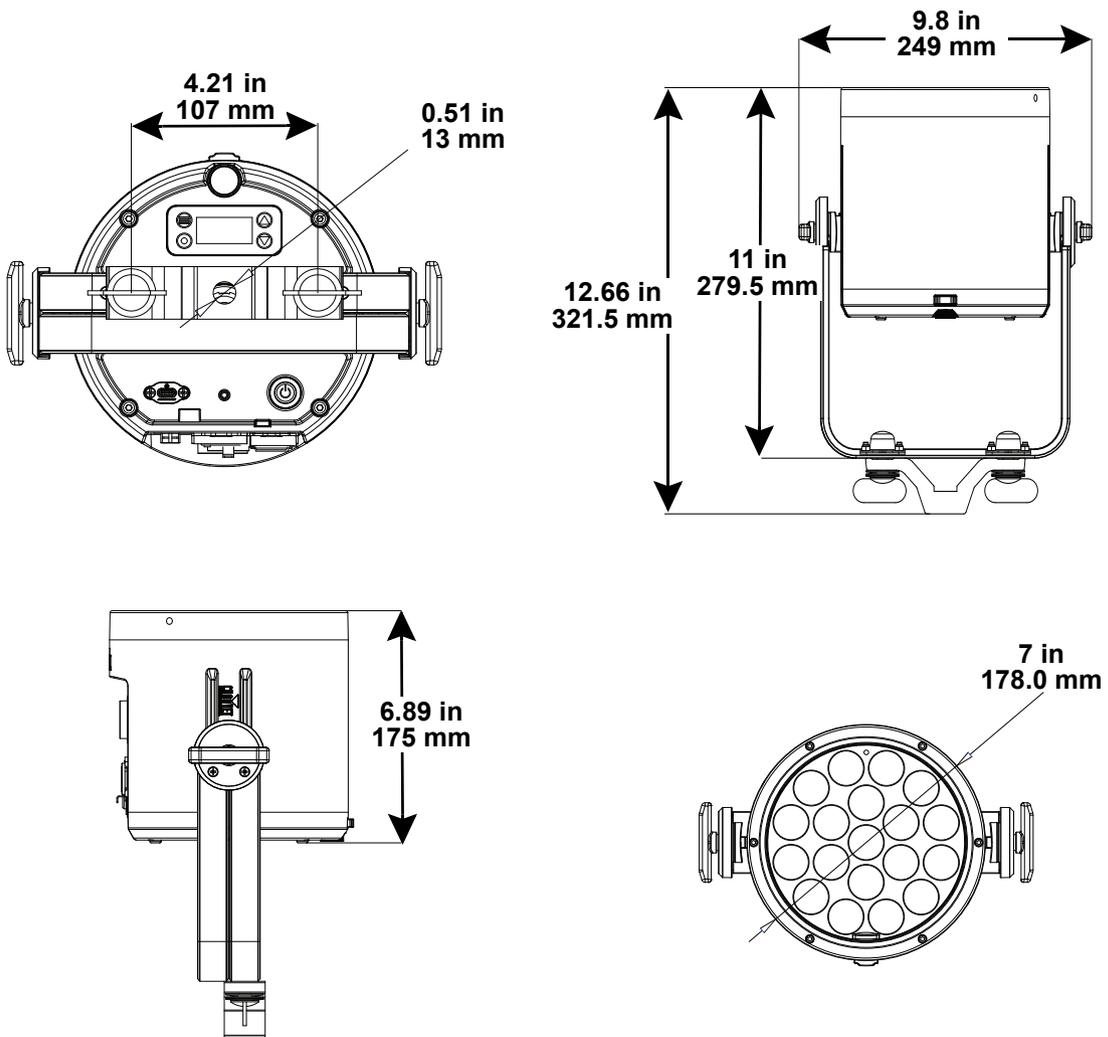

Accessory Overview

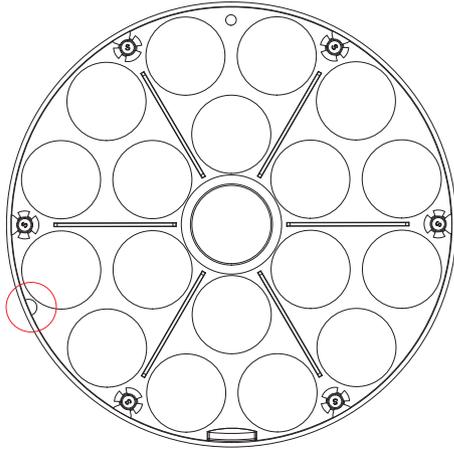


15° Filter

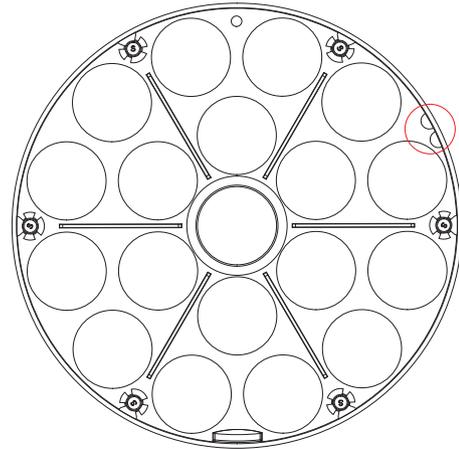



60 x 10° Filter

i The 15° filter may be identified by a single cutout on the lens while the 60X10° filter may be identified two identical cutouts on the lens.


Accessory Dimensions

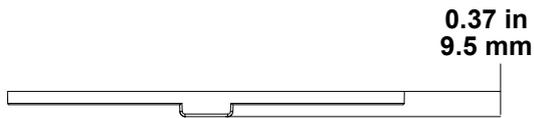

Filter

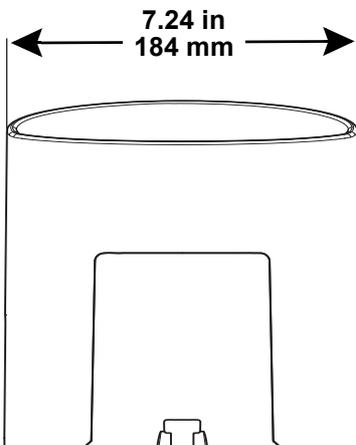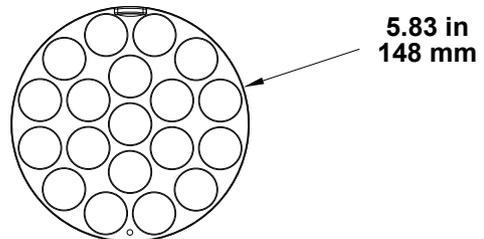

White Cover

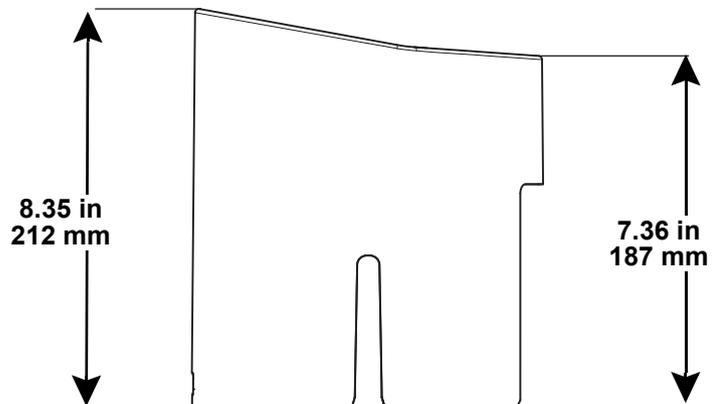

Setup

3. Setup

AC Power

The WELL POD 3 and the charging case included have an auto-ranging power supply and can work with an input voltage range of 100 to 240 VAC, 50/60 Hz.

To determine the product's power requirements (circuit breaker, power outlet, and wiring), use the current value listed on the label affixed to the product's back panel, or refer to the product's specifications chart. The listed current rating indicates the product's average current draw under normal conditions.



- **Always connect the product to a protected circuit (a circuit breaker or fuse). Ensure the product has an appropriate electrical ground to avoid the risk of electrocution or fire.**
- **To eliminate unnecessary wear and improve its lifespan, during periods of non-use completely disconnect the product from power via breaker or by unplugging it.**



Never connect the product to a rheostat (variable resistor) or dimmer circuit, even if the rheostat or dimmer channel serves only as a 0 to 100% switch.

AC Plug

The WELL POD 3 comes with a power input cable terminated with a Seetronic Powerkon A connector on one end and an Edison plug on the other end (U.S. market). If the power cable which came with the product has no plug, or if it is necessary to change the plug, use the table below to wire a plug.

| Connection | Wire (U.S.) | Wire (Europe) | Screw Color |
|------------|--------------|---------------|-----------------|
| AC Live | Black | Brown | Yellow or Brass |
| AC Neutral | White | Blue | Silver |
| AC Ground | Green/Yellow | Green/Yellow | Green |

Fuse Replacement

1. Disconnect this product from the power outlet.
2. Using a flat-head screwdriver, unscrew the fuse holder cap from the housing.
3. Remove the blown fuse and replace with another fuse of the same type and rating (T5A, 250 V).
4. Screw the fuse holder cap back in place and reconnect power.

Power Linking

It is possible to power link WELL POD 3 products. See the table below for the current draw at each voltage and frequency:

WELL POD 3

| | 100 V, 60 Hz | 120 V, 60 Hz | 208 V, 60 Hz | 230 V, 50 Hz | 240 V, 50 Hz |
|---------------------|--------------|--------------|--------------|--------------|--------------|
| Current Draw | 0.89 A | 0.74 A | 0.43 A | 0.39 A | 0.37 A |

Charging case

| | 100 V, 60 Hz | 120 V, 60 Hz | 208 V, 60 Hz | 230 V, 50 Hz | 240 V, 50 Hz |
|---------------------|--------------|--------------|--------------|--------------|--------------|
| Current Draw | 4.80 A | 4.11 A | 2.37 A | 2.20 A | 2.15 A |

Never exceed 12 A on a single circuit. Power-linking cables can be purchased separately.

DMX Linking

The WELL POD 3 can be linked to a DMX controller using a Lumenradio CRMX™ connection. If using other DMX-compatible products with this product, it's possible to control each individually with a single DMX controller.

DMX Personalities

The WELL POD 3 uses a 5-pin DMX data connection for its 3 DMX personalities, ranging from **4 Ch** to **13 Ch**.

- Refer to the [Operation](#) chapter to learn how to configure the WELL POD 3 to work in these personalities.
- The [DMX Channel Assignments and Values](#) section provides detailed information regarding the DMX personalities.



For information about DMX standards, Master/Slave connectivity, or the DMX cables needed to link this product to a DMX controller, download the DMX Primer from the Chauvet website: www.chauvetprofessional.com.

Remote Device Management

Remote Device Management, or RDM, is a standard for allowing DMX-enabled devices to communicate bi-directionally along existing DMX cabling. Check the DMX controller's User Manual or with the manufacturer as not all DMX controllers have this capability. The WELL POD 3 supports RDM protocol that allows feedback to make changes to menu map options.

Master/Slave Connectivity

The Master/Slave mode allows a WELL POD 3 (the master) to control one or more WELL POD 3 products (the slaves) without a DMX controller. One WELL POD 3 becomes the master when running an auto program or in Static mode.

Each slave's control panel must be configured to operate in Slave mode. During Master/Slave operation, the slaves will operate in unison with the master.



DO NOT connect a DMX controller to products operating in Master/Slave mode. The DMX controller signals may interfere with the signals from the master.



- The [Operation](#) section of this manual provides detailed instructions on how to configure the master and slaves.
- For more information about DMX standards or the DMX cables needed to link this product to a DMX controller, download the DMX primer from the Chauvet website: www.chauvetprofessional.com.

Lumenradio CRMX™ Connection

In optimal conditions, the WELL POD 3 can operate up to 300 m (900 ft) away from the CRMX™ transmitter, The CRMX™ receiver in the WELL POD 3 must be paired with the CRMX™ transmitter for wireless operation.

To operate the WELL POD 3 as a CRMX™ receiver, see [Receiver Configuration](#).

To operate the WELL POD 3 as a CRMX™ transmitter, see [Transmitter Configuration](#).

Receiver Configuration

1. Turn the CRMX™ transmitter on.
2. Connect the CRMX™ transmitter to a DMX controller.
3. Place the WELL POD 3 within 300 m from the CRMX™ transmitter.
4. Turn the WELL POD 3 on.
5. From the WELL POD 3's control panel, go to **DMX Address**.
6. Select the starting address, as with any other DMX compatible product.
7. Go to **Wireless Setting > CRMX On/Off**.
8. Select **On**. (The Signal Strength Indicator will show a ? in front of the bars)
9. Go to **Wireless Setting > Operating Mode**.
10. Select **Receive**. (The **Receive Reset** option will become available)
11. Press the reset button on the CRMX™ transmitter. (The signal strength indicator on the WELL POD 3 will show a 4 in front of the bars for 3 seconds while a connection is established.)

Product Pairing

If the WELL POD 3 has already been paired with the CRMX™ transmitter, the signal strength indicator on top of the display will show the strength of the signal. In this case, the WELL POD 3 is ready to work in Wireless mode.

Pairing the WELL POD 3 and a New CRMX™ Transmitter

1. Follow the instructions under [Receiver Configuration](#) to set a WELL POD 3 product up as a receiving WELL POD 3.
2. From the WELL POD 3 control panel, go to **Wireless Setting > Receive Reset**.
3. Select **Yes**.
4. From the CRMX™ transmitter, press **<RESET>**. The signal indicator on the transmitter will flash.
5. Once the transmitter has found the WELL POD 3, the signal indicator on the CRMX™ transmitter will illuminate solid.
6. The display screen on the WELL POD 3 will show the strength of the signal.



CRMX™ operation can be interrupted or inhibited by people or liquid masses, including water or snow, between the transmitter and receiver. For best results, keep the area between the transmitter and receiver clear of any liquid masses.

Transmitter Configuration

The WELL POD 3 can operate as a CRMX™ transmitter for master/slave mode.

1. From the WELL POD 3's control panel, go to **DMX Address**.
2. Select the starting address, as with any other DMX compatible product.
3. Go to **Wireless Setting > CRMX On/Off**.
4. Select **On**. (The signal strength indicator will show a ? in front of the bars)
5. Go to **Wireless Setting > Operating Mode**.
6. Select **Transmit**. (The **Link** option will become available)

Product Linking

If the WELL POD 3 has already been linked to a receiving product, the signal strength indicator on top of the display will show the strength of the signal. In this case, the WELL POD 3 is ready to work in wireless mode.

Linking WELL POD 3 products with CRMX™

1. Follow the instructions under [Receiver Configuration](#) and set up a WELL POD 3 product as a receiving WELL POD 3.
2. Follow the instructions under [Transmitter Configuration](#) and set up a WELL POD 3 product as a transmitting WELL POD 3.
3. From the control panel of the transmitting WELL POD 3, go to **Wireless Setting > Link**.
4. If the transmitting WELL POD 3 has already been linked to a receiving product and it is necessary to link it to a new receiving product, select **Unlink**.
5. If necessary, return to **Wireless Setting > Link**.
6. Select **Link**.
1. From the control panel of the receiving WELL POD 3, go to **Wireless Setting > Receive Reset**.
2. Select **Yes**.
3. Once the transmitter has found the receiver, the signal indicator on the transmitter will illuminate solid.
4. The display screen on each WELL POD 3 will show the strength of the signal.



CRMX™ operation can be interrupted or inhibited by people or liquid masses, including water or snow, between the transmitter and receiver. For best results, keep the area between the transmitter and receiver clear of any liquid masses.

USB Software Update

The WELL POD 3 allows for software updates with a USB device using the built-in USB port. To update the software using a USB flash drive, do the following:

1. Power on the product, and plug the flash drive into the USB port.
2. Once the flash drive has been detected, the message “**Upgrade Firmware**” will be displayed. Press <ENTER>. If a different message appears on the display, search for the updated software in the main menu (**Update Firmware**) and select from **Only This Unit**, **Multiple Fixture**, **Other Fixture Type**, or **Fixture to Fixture**. A list of the updated software files will be displayed.
3. Select the file that needs to be uploaded. The message “**Are you sure?**” will be displayed. Press <ENTER>.



If the selected file is incorrect, the upgrade will fail, and the display will go back to the main interface. Repeat steps 1–3 using the correct file.

4. If the selected file is correct, the upgrade will start. DO NOT turn off the power or disconnect the USB during the process. USB update can take several minutes to complete.
5. When the update is completed, the fixture will automatically reboot.
6. Go to **Information** on the product’s menu map and confirm the firmware revision.
7. When the boot-up process is finished, restart the product.



- Place the .chl file in the root directory of the USB drive.
- The product’s USB port supports up to 32GB capacity and only works with FAT32 file format.



Turning off the power, removing the USB, or not setting the fixture to the correct protocol during the update can cause partial or total firmware failure in the targeted fixture(s). Please refer to [Charging Case USB Software Update](#) section to fix firmware failure issues.

Charging Case USB Software Update

The WELL POD 3 allows for software update through USB using the built-in USB port in the charging case. The product’s USB port supports up to 32GB capacity and only works with FAT32 file format. To update the software using a USB flash drive, do the following:

1. Create a folder on the USB drive named “**POD3**” and drag the software onto it.
2. Power on the WELL POD 3 products that need a software upgrade.
3. Place the WELL POD 3 in the charging flight case, connecting them to the charging ports.
4. Connect the power cable to the charging case.
5. Plug the USB into the USB port and check the upgrade indicator light.
 - A flashing upgrade indicator light means the software is upgrading.
 - A steady, always on upgrade indicator light means the software update is finished.



The USB port on the charging case supports up to 32GB capacity and only works with FAT32 file format.

Setup

Mounting

Before mounting the product, read and follow the safety recommendations indicated in the [Safety Notes](#).

Orientation

Always mount this product in a safe position, making sure there is adequate room for ventilation, configuration, and maintenance.

Rigging


Chauvet recommends using the following general guidelines when mounting this product.

- Before deciding on a location for the product, make sure there is easy access to the product for maintenance and programming purposes.
- Make sure that the structure and attachment points can support the weight before hanging the product (see the [Technical Specifications](#) for weight information).
- When mounting the product overhead, always use a safety cable. Mount the product securely to a rigging point, whether an elevated platform or a truss.
- When rigging the product onto a truss, use a mounting clamp of appropriate weight capacity.
- When power linking multiple products, mount the products close enough for power-linking cables to reach.
- The bracket adjustment knobs allow for directional adjustment when aiming the product to the desired angle. Only loosen or tighten the bracket knobs manually. Using tools could damage the knobs.

Procedure

The WELL POD 3 comes with an Omega/adjustable bracket. The user can directly attach a mounting clamp (sold separately) to this Omega bracket. Make sure the clamp is capable of supporting the weight of this product. For the Chauvet Professional line of mounting clamps, go to <http://www.trusst.com/products>.


Mounting Diagram

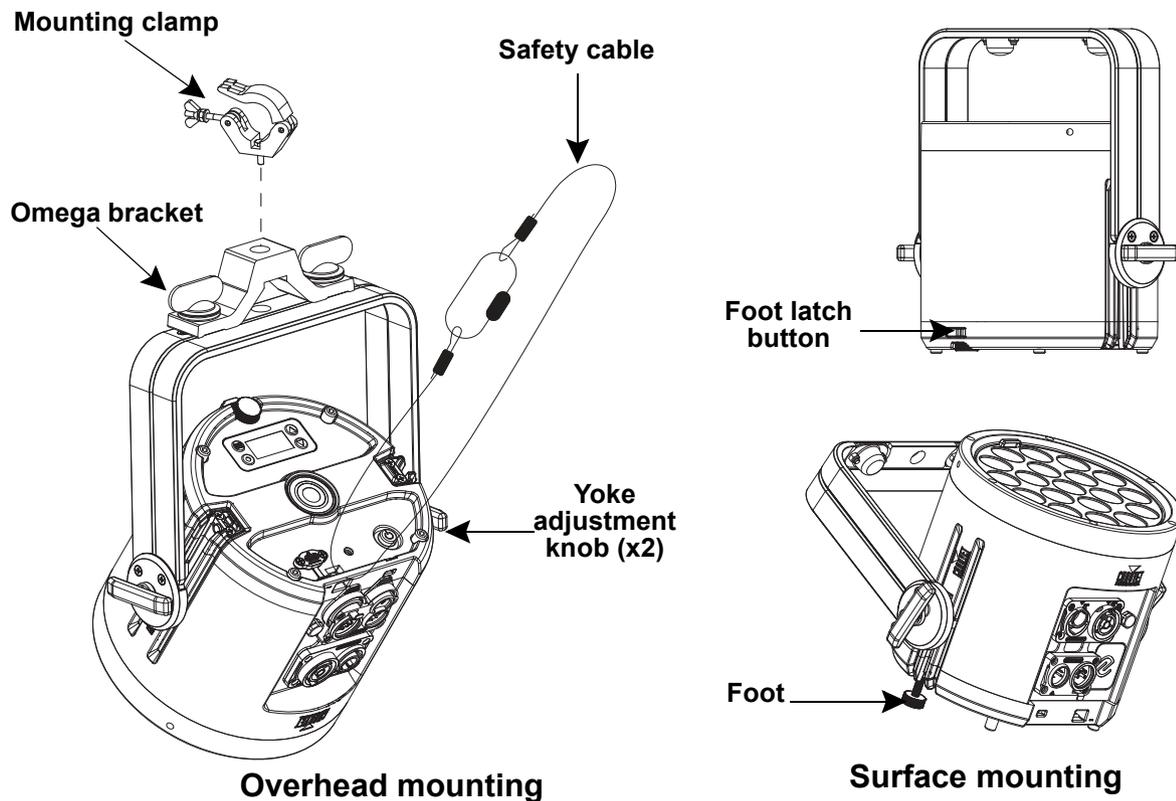


Detachable Split Yokes

The WELL POD 3 comes with detachable spit yokes. To detach the yokes, do the following:


1. Loosen the yoke adjustment knobs and ensure that the yoke is positioned upright.

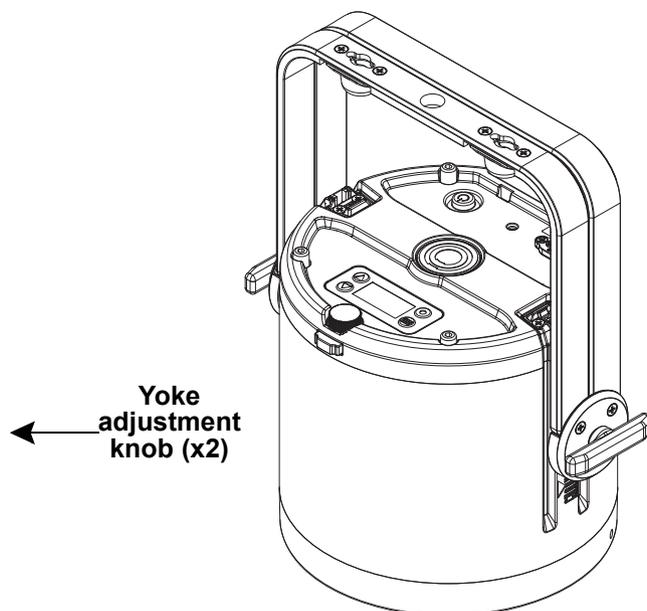


2. Pinch the tabs at the top of the slot inwards.

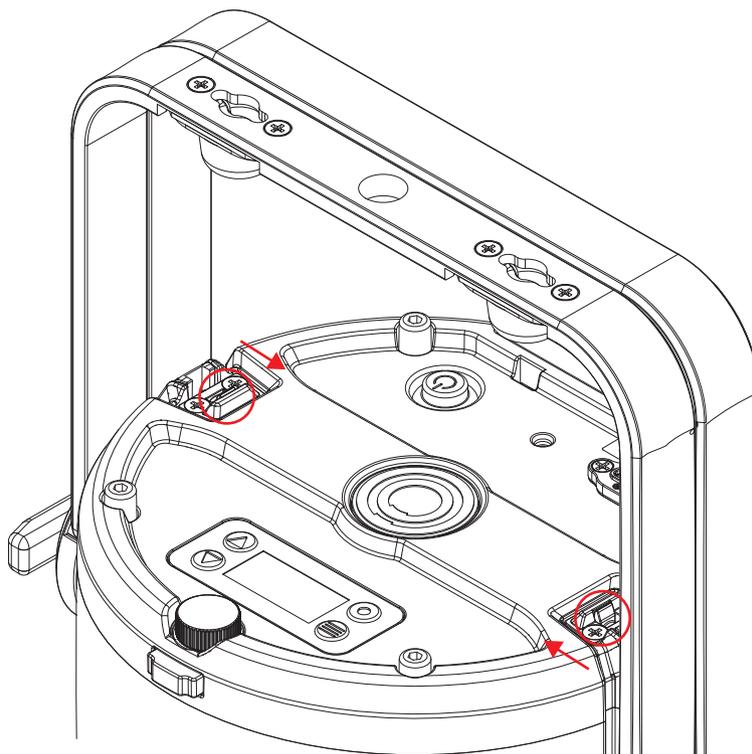

3. With the tabs pressed inwards, adjust the position of the yoke to the desired position, or remove the yoke entirely.

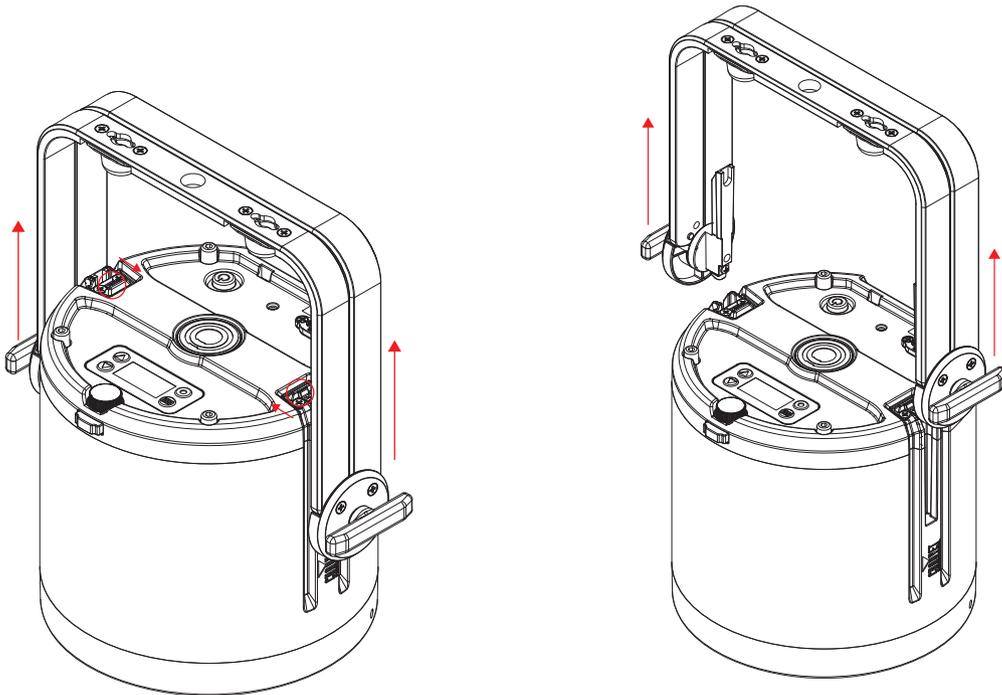

4. To put the yoke back in place, pinch the tabs and slide the yoke into the slot until the tabs click.

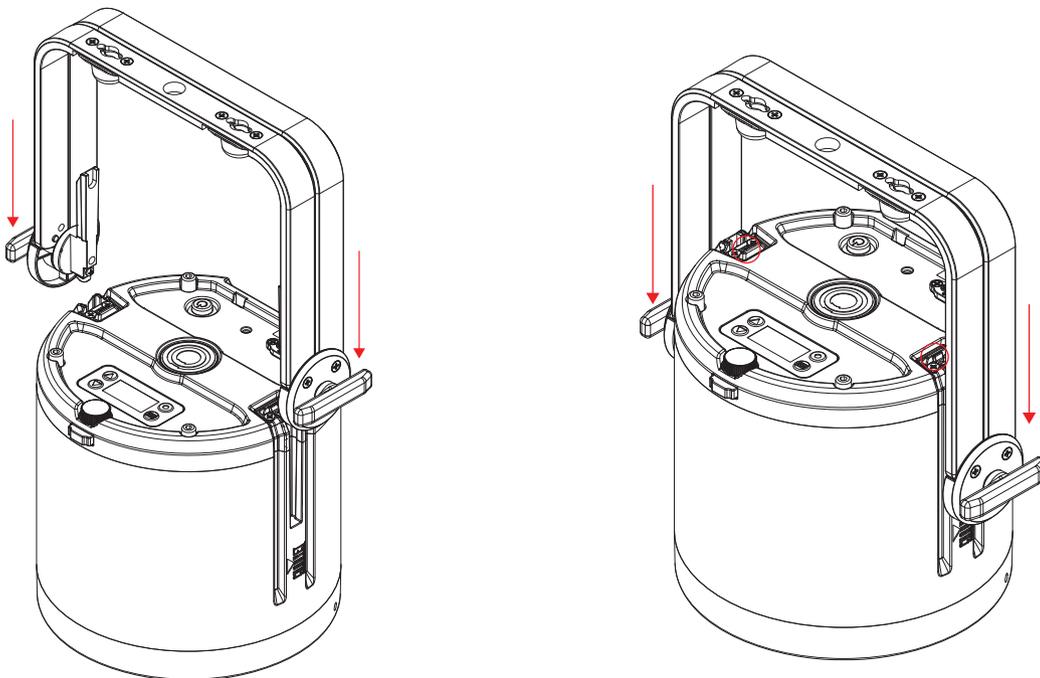

- Ensure that the connectors are attached correctly. Inserting the short end of the connector first. Failing to do so may break the yoke.
- Do not force on the bracket or insert the long end of the connector into the slot. Doing so may break the product's yoke

4. Operation

Control Panel Description

| Button | Name | Function |
|---|---------|--|
|  | <UP> | Navigates upwards through the menu list or increases the numeric value when in a function |
|  | <MENU> | Exits from the current menu or function |
|  | <DOWN> | Navigates downwards through the menu list or decreases the numeric value when in a function |
|  | <ENTER> | Enables the currently displayed menu or sets the currently selected value into the selected function |

Control Options

Set the WELL POD 3 starting address in the **001-508** DMX range. This enables control of up to 102 products in the 5-channel **5Ch** personality.

Programming

Refer to the menu map to understand the menu options. The menu map shows the main menu and a variable number of programming levels for each option.

- To access the main menu, press <MENU>.
- To access the main menu from the [DMX Configuration](#), press <MENU>.
- To navigate to the desired option in the main menu, press <MENU> repeatedly until the option is indicated, or use <UP> or <DOWN> to navigate directly.
- Press <ENTER> to select the indicated option.
- Use <UP> or <DOWN> to navigate within a programming level until the desired option is indicated.
- To return to the main menu, press <MENU> repeatedly until it shows on the display.
- Press and hold <MENU> to return to the home screen.

Home Screen

The WELL POD 3 has a home screen that shows the current operating mode, DMX personality, starting address, product temperature, signal strength, and battery life. To see the home screen, press and hold <MENU> until it shows on the display. From the home screen, press <MENU> to reach the main menu.

Control Panel Lock

The setting locks or unlocks the control panel.

1. Go to the **Password** main level.
2. Select **On** (locks control panel) or **Off** (control panel stays unlocked)



When the control panel lock is activated, the product will prompt for the passcode in order to access the menu. Enter the passcode as described below.

Passcode

When prompted, enter the following passcode: <UP>, <DOWN>, <UP>, <DOWN>, <ENTER>. It is not possible to change this passcode.

Menu Map

Refer to the WELL POD 3 product page on www.chauvetprofessional.com for the latest menu map.

| Main Level | Programming Levels | | Description | |
|----------------------|---------------------------|-----------------------------|--|---|
| DMX Address | 001–508 | | Selects DMX address (highest channel restricted to personality chosen) | |
| DMX Channel | 5 Ch | | 5-channel: RGBW | |
| | 8 Ch | | 8-channel: 16-bit dimmer, RGBW, strobe, red shift | |
| | 12 Ch | | 12-channel: 3-zone RGBW | |
| Static | Fixed Color | R | Dimmer 000–255 | Red |
| | | G | | Green |
| | | B | | Blue |
| | | W | | White |
| | | GB | | Green and blue |
| | | RB | | Red and blue |
| | | RG | | Red and green |
| | | RGB | | Red, green, and blue |
| | | RW | | Red and white |
| | | GW | | Green and white |
| | | BW | | Blue and white |
| | | RGW | | Red, green, and white |
| | | RBW | | Red, blue, and white |
| | | GBW | | Green, blue, and white |
| | RGBW | Red, green, blue, and white | | |
| | Color Temperature | 2800K | Dimmer 000–255 | Preset white color temperatures. Emulates a tungsten lamp at the specified color temperature. |
| | | 3200K | | |
| | | 3500K | | |
| | | 4000K | | |
| | | 4500K | | |
| | | 5000K | | |
| | | 5600K | | |
| | | 6000K | | |
| | Manual Color Mixer | Red | 000–255 | Combine red, green, blue, and white to make a custom color temperature |
| | | Green | | |
| | | Blue | | |
| | | White | | |
| Auto Show | Auto 1–5 | 001–100 | Selects automatic programs and program speed | |
| Master/Slave | Master | | DMX mode (Master) | |
| | Slave | | Slave mode | |
| Dimmer Curve | Scurve | | S curve dimmer | |
| | Linear | | Liner dimmer | |
| | Square | | Square curve dimmer | |
| | Inverse Square | | Reverse square curve dimmer | |
| Dimmer Mode | Off | | Linear dimmer | |
| | Dimmer 1–3 | | Dimming curves Dimmer 1 (fast) to Dimmer 3 (slow) | |
| White Balance | Off | | Uses factory default white setting | |
| | Manual | Red | 125–255 | Sets red LED maximum value |
| | | Green | | Sets green LED maximum value |
| | | Blue | | Sets blue LED maximum value |
| | | White | | Sets white LED maximum value |

| Main Level | Programming Levels | | Description |
|------------------------------|--------------------|---|---|
| LED Frequency | 1000Hz | | Sets the PWM frequency |
| | 2000Hz | | |
| | 3000Hz | | |
| | 4000Hz | | |
| | 6000Hz | | |
| | 25KHz | | |
| Wireless Setting | CRMX On/Off | On | Enables/disables wireless DMX |
| | | Off | |
| | Operating Mode | Receive | Sets fixture as a receiver |
| | | Transmit | Sets fixture as a transmitter |
| | Link | Link | Links with a receiver |
| | | Unlink | Unlinks with a linked receiver |
| Receive Reset | No | Resets the wireless receiver to reset the link with the transmitter or to link with a new transmitter | |
| | Yes | | |
| Line Voltage Power Loss Mode | Stay In State | | If line power is lost, the fixture will continue to function as programmed under battery power (default) |
| | All At Full | | After 5 seconds of line power loss, all LEDs will go to full power (returns to normal operation when line power is restored) |
| | Dim Out | | After 5 seconds of line power loss, the LEDs will dim in a 10 second fade to black (returns to normal operation when line power is restored) |
| Run Time | Off | | Maximum intensity for all LEDs |
| | 5 Hours | | Reduced intensity, limiting battery run time to 5 hours |
| | 8 Hours | | Reduced intensity, limiting battery run time to 8 hours |
| | 12 Hours | | Reduced intensity, limiting battery run time to 12 hours |
| | 18 Hours | | Extends battery to the maximum run time of 18 hours |
| Back Light | 10S | | Turns off display backlight after 10 seconds of inactivity |
| | 30S | | Turns off display backlight after 30 seconds of inactivity |
| | 2Min | | Turns off display backlight after 2 minutes of inactivity |
| | Always On | | Display backlight always on |
| Password | On | | Locks display (password is <UP>, <DOWN>, <UP>, <DOWN>, <ENTER>) |
| | Off | | |
| RF Setting | Off | | Turns off RF reception |
| | Link | | Links the fixture to a single RF controller |
| | Public | | Allows the fixture to respond to all RF signals |
| | Group | Group 1-4 | Assigns a group for RF control |
| Information | Fixture Hours | <_ _ _ _ H> | Shows total hours the product has been powered on |
| | LED Hours | <_ _ _ _ H> | Shows total hours the LEDs have been powered on |
| | Version | <V _ _> | Shows current firmware version |
| | UID | <_ _ _ _ _> | Shows product UID |

Operation

| Main Level | Programming Levels | | Description |
|------------------|--------------------|----------|---|
| Upgrade Firmware | Only This Fixture | -----CHL | Selects an update file for this product or shows, "No such file!" |
| | Multiple Fixture | -----CHL | Selects an update file for this and connected WELL POD 3 products, or shows "No such file!" |
| | Other Fixture Type | -----CHL | Selects an update file for other connected products, or shows "No such file!" |
| Beep Alarm | Off | | Disables or enables beep alarm |
| | On | | |
| Factory Reset | No | | Resets the product to factory default settings |
| | Yes | | |

DMX Configuration

Use control configurations to operate the product with a DMX controller.

DMX Personalities

To set the DMX personality:

1. Go to the **DMX Channel** main level.
2. Select the desired personality, from **5 Ch**, **8 Ch**, or **12 Ch**.



- See the [Starting Address](#) section for the highest selectable starting address for each personality.
- Make sure that the starting addresses on the various products do not overlap due to the new personality setting.

Starting Address

Each product will respond to a unique starting address from the controller. All products with the same starting address will respond in unison. To set the starting address in DMX mode:

1. Go to the **DMX Address** main level.
2. Select the starting address (**001–512**).

| Personality | Highest Address | Products per Universe |
|-------------|-----------------|-----------------------|
| 5 Ch | 508 | 102 |
| 8 Ch | 505 | 64 |
| 12 Ch | 501 | 42 |

DMX Channel Assignments and Values

Control Chart

Color Macro Chart

| Value | Percent/Setting | Value | Percent/Setting |
|-----------|---------------------------------|-----------|-----------------|
| 000 ⇔ 010 | No function | 201 ⇔ 205 | Color 1 |
| 011 ⇔ 030 | Red 100%, green 0–100% | 206 ⇔ 210 | Color 2 |
| 031 ⇔ 050 | Red 100–0%, green 100% | 211 ⇔ 215 | Color 3 |
| 051 ⇔ 070 | Green 100%, blue 0–100% | 216 ⇔ 220 | Color 4 |
| 071 ⇔ 090 | Green 100–0%, blue 100% | 221 ⇔ 225 | Color 5 |
| 091 ⇔ 110 | Red 0–100%, blue 100% | 226 ⇔ 230 | Color 6 |
| 111 ⇔ 130 | Red 100% blue 100–0% | 231 ⇔ 235 | Color 7 |
| 131 ⇔ 150 | Red 100%, green and blue 0–100% | 236 ⇔ 240 | Color 8 |
| 151 ⇔ 170 | Red and green 100–0%, blue 100% | 241 ⇔ 245 | Color 9 |
| 171 ⇔ 200 | Red, green, and blue 100% | 246 ⇔ 250 | Color 10 |
| | | 251 ⇔ 255 | Color 11 |

Color Temperature Chart

| Value | Percent/Setting | Actual Temperature | Red | Green | Blue | White |
|-----------|-----------------|--------------------|-----|-------|------|-------|
| 000 ⇔ 005 | No function | – | – | – | – | – |
| 006 ⇔ 025 | 2800K | 2780K | 078 | 035 | 000 | 255 |
| 026 ⇔ 050 | 3200K | 3184K | 057 | 049 | 008 | 255 |
| 051 ⇔ 075 | 3500K | 3510K | 039 | 056 | 013 | 255 |
| 076 ⇔ 100 | 4000K | 3998K | 053 | 093 | 028 | 255 |
| 101 ⇔ 125 | 4500K | 4527K | 040 | 107 | 039 | 255 |
| 126 ⇔ 150 | 5000K | 4005K | 042 | 128 | 052 | 255 |
| 151 ⇔ 175 | 5600K | 5651K | 004 | 115 | 058 | 255 |
| 176 ⇔ 200 | 6000K | 6022K | 005 | 134 | 065 | 255 |
| 201 ⇔ 225 | 6500K | 6532K | 011 | 141 | 079 | 255 |
| 226 ⇔ 255 | No function | – | – | – | – | – |

Control Chart

| Value | Percent/Setting | Value | Percent/Setting |
|-----------|---------------------------------|-----------|-----------------------------------|
| 000 ⇔ 010 | No function | 090 ⇔ 094 | Dimmer speed mode off (immediate) |
| 011 ⇔ 029 | Reserved for future use | 095 ⇔ 099 | Dimmer speed mode 1 (fastest) |
| 030 ⇔ 034 | 1000 Hz Pulse Width Modulation* | 100 ⇔ 104 | Dimmer speed mode 2 (medium) |
| 035 ⇔ 039 | 2000 Hz Pulse Width Modulation* | 105 ⇔ 109 | Dimmer speed mode 3 (slowest) |
| 040 ⇔ 044 | 3000 Hz Pulse Width Modulation* | 110 ⇔ 149 | Reserved for future use |
| 045 ⇔ 049 | 4000 Hz Pulse Width Modulation* | 150 ⇔ 154 | Run time mode off |
| 050 ⇔ 054 | 6000 Hz Pulse Width Modulation* | 155 ⇔ 159 | 5 hour run time mode |
| 055 ⇔ 059 | 25 KHz Pulse Width Modulation* | 160 ⇔ 164 | 8 hour run time mode |
| 060 ⇔ 069 | Reserved for future use | 165 ⇔ 169 | 12 hour run time mode |
| 070 ⇔ 074 | S-Curve dimmer curve* | 170 ⇔ 174 | 18 hour run time mode |
| 075 ⇔ 079 | Linear dimmer curve* | 175 ⇔ 249 | Reserved for future use |
| 080 ⇔ 084 | Square dimmer curve* | 250 ⇔ 255 | No function |
| 085 ⇔ 089 | Inverse square dimmer curve* | | *Hold for 5 seconds |

Operation

12 Ch / 8 Ch / 5 Ch

| 5 | 8 | 12 | Function | Value | Percent/Setting |
|---|---|----|--------------------------------|--|--|
| – | 1 | 1 | Dimmer | 000 ⇔ 255 | 0–100% |
| – | 2 | 2 | Fine dimmer | 000 ⇔ 255 | 0–100% |
| – | 3 | 3 | Strobe | 000 ⇔ 010 011 ⇔ 255 | No function Strobe, slow to fast |
| 1 | 4 | 4 | Red | 000 ⇔ 255 | 0–100% |
| 2 | 5 | 5 | Green | 000 ⇔ 255 | 0–100% |
| 3 | 6 | 6 | Blue | 000 ⇔ 255 | 0–100% |
| 4 | 7 | 7 | White | 000 ⇔ 255 | 0–100% |
| – | – | 8 | Color macro | 000 ⇔ 255 | See the Color Macro Chart |
| – | – | 9 | Color temperature | 000 ⇔ 255 | See the Color Temperature Chart |
| – | – | 10 | Automatic program | 000 ⇔ 010 011 ⇔ 060 061 ⇔ 110 111 ⇔ 160 161 ⇔ 210 211 ⇔ 255 | No function Automatic program 1 Automatic program 2 Automatic program 3 Automatic program 4 Automatic program 5 (cycle 1–4) |
| – | – | 11 | Automatic program speed | 000 ⇔ 255 | Program speed, slow to fast |
| 5 | 8 | 12 | Control | 000 ⇔ 255 | See the Control Chart |

Standalone Configuration

Static Mode

The static mode options include fixed colors, preset color temperatures, and a manual color mixer.

Fixed Color

To select a fixed color:

1. Go to the **Static** main level.
2. Select the **Virtual Color Wheel** option.
3. Select the desired color combination (**R, G, B, W, GB, RB, RG, RGB, RW, GW, BW, RGW, RBW, GBW, or RGBW**).
4. Set the **Value** from **000–255**.

Color Temperature

To select a preset color temperature via the menu map:

1. Go to the **Static** main level.
2. Select the **Color Temp** option.
3. Select the desired color temperature (**2800K, 3200K, 3500K, 4000K, 4500K, 5000K, 5600K, 6000K, or 6500K**). See the [Color Temperature Chart](#).
4. Set the **Value** from **000–255**.

Manual Color Mixer

To manually mix a custom static color:

1. Go to the **Static** main level.
2. Select **Manual Color**.
3. Select the color to edit (**R, G, B, or W**).
4. Set the value for the selected color (**000–255**).
5. Repeat steps 3 and 4 until product outputs as desired.

Auto Show

To select an automatic program:

1. Go to the **Auto Show** main level.
2. Select the desired auto program (**Auto 1–5**).
3. Set the **Speed** value (**001–100**).

Settings Configuration

Master/Slave

To set the WELL POD 3 product to master or slave mode:

1. Go to the **Master/Slave** main level.
2. Select from **Master** (sends control signal) or **Slave** (receives control signal).



- **Configure all the slave products before connecting the master to the daisy chain.**
- **Never connect a DMX controller to a DMX string configured for Master/Slave operation because the controller may interfere with the signals from the master.**
- **Do not connect more than 31 slaves to the master.**

Dimmer Curve

To set the dimmer curve:

1. Go to the **Dimmer Curve** main level.
2. Select from **S Curve**, **Linear**, **Square**, or **Inverse Square**.

Dimmer Speed Mode

To set the dimmer speed:

1. Go to the **Dimmer Mode** main level.
2. Select the dimmer speed mode from **Off** (instant), **Dimmer 1** (fastest), **Dimmer 2**, or **Dimmer 3** (slowest).

White Balance

To configure the white balance:

1. Go to the **White Balance** main level.
2. Select from **Off** or **Manual**.
3. If **Manual**, select the maximum color value to edit (**R**, **G**, **B**, or **W**).
4. Set the maximum level for the selected color (**125–255**).
5. Repeat steps 3–4 until the colors are calibrated as desired.

Pulse Width Modulation

To set the frequency of the pulse width modulation:

1. Go to the **LED Frequency** main level.
2. Select the PWM frequency (**1000Hz**, **2000Hz**, **3000Hz**, **4000Hz**, **6000Hz**, or **25KHz**).

Power Loss Mode

To set how the product will respond to a line power loss.

1. Go to the **Power Loss Mode** main level.
2. Select from the **Stay InState** (the fixture will continue to function as programmed under battery power), **All at Full** (all LEDs will go to full power after 5 seconds of line power loss, and return to normal operation when line power is restored), or **Dim Out** (all LEDs will dim in a 10 second fade to black, and return to normal operation when line power is restored) options.

Run Time Mode

To select an operation mode which balances output intensity with battery run time:

1. Go to the **Run Time** main level.
2. Select from the **5 Hours**, **8 Hours**, **12 Hours** (increases or reduces the intensity, limiting the battery run time to 5, 8, or 12 hours), **18 Hours** (extends the battery life to the maximum run time of 18 hours) options, or **Off**.

Display Backlight

To set how long the display will stay lit without activity:

1. Go to the **Back Light** main level.
2. Select from **10S** (10 seconds), **30S** (30 seconds), **2Min** (2 minutes), or **Always On**.

Information

To view product information, such as the number of hours the product has been on, the driver firmware, etc., go to the **Information** main level.

Operation

Beep Alarm

To set an alarm that will go off if anyone moves the fixture:

1. Go to the **Beep Alarm** main level.
2. Select **Off** (disable) or **On** (set).



- **Install the fixture in the desired position before setting the Beep Alarm. Any motion detected after setting the alarm will trigger it.**
- **When the alarm goes off, the fixture will emit a sustained high pitch sound accompanied by a rapid color chase.**

Factory Reset

To reset the product to factory default settings:

1. Go to the **Factory Reset** main level.
2. Select **No** (do not reset) or **Yes** (reset).

Radio Frequency Configuration


RF Setting

To configure the product for radio frequency control:

1. Go to the **RF Setting** main level.
2. Select from the **Off** (disables RF control reception), **Link** (highlight without pressing **<Enter>** to enable linking with a single controller), **Public** (enables control by all RF signals), or **Group** (to assign this fixture to a group for RF control) option.
3. For:
 - **Link**: DO NOT press **<ENTER>**. Highlight the **Link** option, and press and hold **<Blackout>** on the RF Controller until the WELL POD 3 display shows **RF Connected** or **RF Disconnected**.
 - **Group**: assign the product to the desired group, from **Group 1–4**.

RF Controller Operation

| RFC | Button | Function |
|-----|------------------------------|---|
| | <BLACK OUT> | Press to turn off all lights until the button is pressed again Press and hold to link or unlink to a fixture |
| | <STROBE> | Press to toggle strobe, then use <+> or <-> to increase or decrease strobe speed |
| | <DIMMER> | Press then use <+> or <-> to increase or decrease the dimmer |
| | <AUTO> | Press to activate automatic mode, then use <+> or <-> to select a program |
| | <SPEED> | Press then use <+> or <-> to increase or decrease speed |
| | <CRMX> | Press and hold for 5 seconds to reset CRMX™ receiver |
| | <-> | Press to decrease speed, sensitivity, or the dimmer/color value, or to scroll down the list of programs |
| | <+> | Press to increase speed, sensitivity, or the dimmer/color value, or to scroll up the list of programs |
| | <FREEZE> | Press to stop all movement and color chasing |
| | <R> | In manual mode, press then use <+> or <-> to increase or decrease the red value |
| | <G> | In manual mode, press then use <+> or <-> to increase or decrease the green value |
| | | In manual mode, press then use <+> or <-> to increase or decrease the blue value |
| | <W> | In manual mode, press then use <+> or <-> to increase or decrease the white value |
| | <FADE/SNAP> | Press to activate automatic mode, then use <+> or <-> to select a program |
| | <MANUAL> | Press to activate manual mode, the press to cycle through colors |
| | <PRESET/ COLOR> | Press to activate fixed colors then use <+> or <-> to select a color |

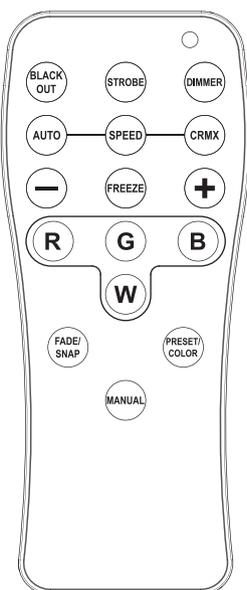

The RF Controller will not respond to any inputs when Freeze or Black Out is activated. If the remote does not respond when a button is pressed, try pressing **<FREEZE>** or **<BLACK OUT>**. Freeze or Black Out may have been inadvertently activated.

Error Codes

See the table below for error codes and recommended solutions:

| Error Code | Possible Reason | Potential Solution |
|-------------------------|---|--------------------------------------|
| Temperature shows -40°C | The thermistor is not welded properly | Repair or replace the thermistor PCB |
| | The temperature control wire is disconnected or has a poor connection | Check the wire connection |
| Temperature shows 128°C | The thermistor is not welded properly | Repair or replace the thermistor PCB |
| | The temperature control connector has a short circuit | Check the wire connector |

5. Maintenance

Product Maintenance

Dust build-up reduces light output performance and can cause overheating. This can lead to reduction of the light source's life and/or mechanical wear. To maintain optimum performance and minimize wear, clean each lighting product at least twice a month. However, be aware that usage and environmental conditions could be contributing factors to increase the cleaning frequency.

To clean the product, follow the instructions below:

1. Unplug the product from power.
2. Wait until the product is at room temperature.
3. Use a vacuum (or dry compressed air) and a soft brush to remove dust collected on the external surface/vents.
4. Clean all transparent surfaces with a mild soap solution, ammonia-free glass cleaner, or isopropyl alcohol.
5. Apply the solution directly to a soft, lint free cotton cloth or a lens cleaning tissue.
6. Softly drag any dirt or grime to the outside of the transparent surface.
7. Gently polish the transparent surfaces until they are free of haze and lint.



Always dry the transparent surfaces carefully after cleaning them.

6. Technical Specifications

Dimensions and Weight

| Parameter | Length | Width | Height | Weight |
|---------------|------------------|------------------|-------------------|------------------|
| WELL POD 3 | 9.76 in (248 mm) | 7 in (178 mm) | 10.86 in (276 mm) | 11.2 lb (5.1 kg) |
| Charging Case | 27 in (685 mm) | 25.6 in (650 mm) | 15 in (380 mm) | |

Note: Dimensions in inches are rounded.

Power

| Power Supply Type | Range | Voltage Selection |
|----------------------|--------------------------|-------------------|
| Switching (internal) | 100 to 240 VAC, 50/60 Hz | Auto-ranging |

| Single Unit | 100 V, 60 Hz | 120 V, 60 Hz | 208 V, 60 Hz | 230 V, 50 Hz | 240 V, 50 Hz |
|-----------------------|--------------|--------------|--------------|--------------|--------------|
| Consumption | 88 W | 79 W | 56 W | 56 W | 88 W |
| Operating Current | 0.89 A | 0.74 A | 0.43 A | 0.39 A | 0.37 A |
| Power Linking Current | T5A | T5A | T5A | T5A | T5A |

| Charging case | 100 V, 60 Hz | 120 V, 60 Hz | 208 V, 60 Hz | 230 V, 50 Hz | 240 V, 50 Hz |
|-----------------------|--------------|--------------|--------------|--------------|--------------|
| Consumption | 307 W | 306 W | 306 W | 305 W | 305 W |
| Operating Current | 4.8 A | 4.11 A | 2.37 A | 2.2 A | 2.15 A |
| Power Linking Current | T5A | T5A | T5A | T5A | T5A |

| Power I/O | U.S./Worldwide | UK/Europe |
|------------------------|-------------------------|-------------------------|
| Power Input Connector | Seetronic Powerkon IP65 | Seetronic Powerkon IP65 |
| Power Output Connector | Seetronic Powerkon IP65 | Seetronic Powerkon IP65 |
| Power Cable plug | Edison | Local plug |

Light Source

| Type | Color | Quantity | Power | Current | Lifespan |
|------|-------|----------|--------|---------|--------------|
| LED | RGBWW | 19 | 13.4 W | 960 mA | 50,000 hours |

Photometrics

| Color Temperature Range | Beam Angle | Field Angle | Cutoff Angle |
|-------------------------|------------|-------------|--------------|
| 2800 to 6500 K | 12.7° | 25.4° | 47.2° |

| | Run Time Off | Run Time 5 Hours | Run Time 8 Hours | Run Time 12 Hours | Run Time 18 Hours |
|-----------------|--------------|------------------|------------------|-------------------|-------------------|
| Lumens | 1994 lm | 2177 lm | 1379 lm | 845 lm | 555 lm |
| Illuminance @5m | 946 lux | 1033 lux | 655 lux | 398 lux | 261 lux |

Thermal

| Maximum External Temperature | Cooling System |
|------------------------------|-------------------------|
| 113 °F (45 °C) | Fan-assisted Convection |

Control

| DMX I/O Connector | Channel Range |
|-------------------|---------------|
| 5-pin XLR | 4, 8, or 13 |

Ordering

| Product Name | Item Name | Item Code | UPC Number |
|--------------|------------|-----------|--------------|
| WELL POD 3 | WELLPOD3X4 | 03032040 | 781462223885 |



Contact Us

| General Information | Technical Support |
|---|--|
| Chauvet World Headquarters | |
| Address: 3360 Davie Rd., Suite 509 Davie, FL 33314 Voice: (954) 577-4455 Fax: (954) 929-5560 Toll Free: (800) 762-1084 | Voice: (844) 393-7575 Fax: (954) 756-8015 Email: chauvetcs@chauvetlighting.com Website: www.chauvetprofessional.com |
| Chauvet U.K. | |
| Address: Pod 1 EVO Park Little Oak Drive, Sherwood Park Nottinghamshire, NG15 0EB UK Voice: +44 (0) 1773 511115 Fax: +44 (0) 1773 511110 | Email: UKtech@chauvetlighting.eu Website: www.chauvetprofessional.eu |
| Chauvet Benelux | |
| Address: Vaartlaan 9 9800 Deinze Belgium Voice: +32 9 388 93 97 | Email: BNLtech@chauvetlighting.eu Website: www.chauvetprofessional.eu |
| Chauvet France | |
| Address: 3, Rue Ampère 91380 Chilly-Mazarin France Voice: +33 1 78 85 33 59 | Email: FRtech@chauvetlighting.fr Website: www.chauvetprofessional.eu |
| Chauvet Germany | |
| Address: Bruno-Bürgel-Str. 11 28759 Bremen Germany Voice: +49 421 62 60 20 | Email: DEtech@chauvetlighting.de Website: www.chauvetprofessional.eu |
| Chauvet Mexico | |
| Address: Av. de las Partidas 34 - 3B (Entrance by Calle 2) Zona Industrial Lerma Lerma, Edo. de México, CP 52000 Voice: +52 (728) 690-2010 | Email: servicio@chauvet.com.mx Website: www.chauvetprofessional.mx |

Warranty & Returns

For warranty terms and conditions and return information, please visit our website.

For customers in the United States and Mexico: www.chauvetlighting.com/warranty-registration.

For customers in the United Kingdom, Republic of Ireland, Belgium, the Netherlands, Luxembourg, France, and Germany: www.chauvetlighting.eu/warranty-registration.