

Installation and Assembly Instructions - Solid•Point™ Plasma Adapter Plate for NEC 61MP1 and 61XM2

Model PLP NEC61


IMPORTANT! Read entire instruction sheet before you start installation and assembly.

Parts List

Before you start make sure all parts listed are included with your product.

PART #	QTY.	DESCRIPTION
AA 200-0351	1	adapter plate assembly
BB 520-1068	6	M8 x 1.25 x 15 mm socket pin screw
CC 520-1050	2	M6 x 1.0 x 12 mm socket pin screw
DD 560-9646	1	4 mm security allen wrench

Note: Some parts may appear slightly different than illustrated.

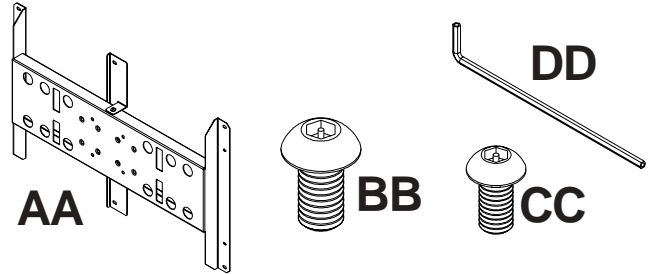

1

Attach adapter bracket (AA) to plasma using six M8 socket pin screws (BB), three on the bottom and three on the top. Then fasten M6 socket-pin screws (CC) into bottom left and bottom right remaining holes as shown. **Note: Top left and right remaining holes are not used.** Tighten all screws using 4 mm security tool (DD).

⚠ WARNING

- Do not overtighten. Overtightening may cause permanent damage to screen. Torque to 26-35 in. / lb. (30-40 kg / cm).

Note: Plasma model 61XM2 does not require M6 socket-pin screws (CC).

