



Model ID: OVATIONCYC1FC





## **Edition Notes**

The Ovation CYC 1 FC User Manual includes a description, safety precautions, installation, programming, operation and maintenance instructions for the Ovation CYC 1 FC as of the release date of this edition.

### **Trademarks**

CHAUVET, Chauvet Professional, the Chauvet logo, and Ovation are registered trademarks or trademarks of Chauvet & Sons, LLC (d/b/a Chauvet and Chauvet Lighting) in the United States and other countries. Other company and product names and logos referred to herein may be trademarks of their respective companies.

## **Copyright Notice**

The works of authorship contained in this manual, including, but not limited to, all design, text and images are owned by Chauvet.

© Copyright 2022 Chauvet & Sons, LLC. All rights reserved.

Electronically published by Chauvet in the United States of America.

#### Manual Use

Chauvet authorizes its customers to download and print this manual for professional information purposes only. Chauvet expressly prohibits the usage, copy, storage, distribution, modification, or printing of this manual or its content for any other purpose without written consent from Chauvet.

## **Document Printing**

For best results, print this document in color, on letter size paper (8.5 x 11 in), double-sided. If using A4 paper (210 x 297 mm), configure the printer to scale the content accordingly.

#### Intended Audience

Any person installing, operating, and/or maintaining this product should completely read through the guide that shipped with the product, as well as this manual, before installing, operating, or maintaining this product.

#### Disclaimer

Chauvet believes that the information contained in this manual is accurate in all respects. However, Chauvet assumes no responsibility and specifically disclaims any and all liability to any party for any loss, damage or disruption caused by any errors or omissions in this document, whether such errors or omissions result from negligence, accident or any other cause. Chauvet reserves the right to revise the content of this document without any obligation to notify any person or company of such revision, however, Chauvet has no obligation to make, and does not commit to make, any such revisions. Download the latest version from <a href="https://www.chauvetprofessional.com">www.chauvetprofessional.com</a>.

#### **Document Revision**

This Ovation CYC 1 FC User Manual is the 4<sup>rd</sup> edition of this document. Go to <a href="https://www.chauvetprofessional.com">www.chauvetprofessional.com</a> for the latest version.



## **TABLE OF CONTENTS**

1.	Before You Begin	1
	What Is Included	1
	Claims	
	Manual Conventions	
	Symbols	
	Expected LED Lifespan	
	Safety Notes	2
	Personal SafetyMounting and Rigging	
	Power and Wiring	2
	Operation	2 2 2
2	Introduction	
۷.	Description	
	·	2
	Features	
	Product Overview	3
_	Product Dimensions	
3.	Setup	5
	AC Power	5 5 5 6
	AC Plug	5
	Power Linking	5
	DMX Linking	
	DMX Personalities	6
	Master/Slave Connectivity	6
	Remote Device Management (RDM)	6
	Mounting	7
	Orientation	
	Rigging	6 7 7 7
1	Procedure	
4.	Operation	8
	Control Panel Operation	
	Control Options	
	Programming	
	Menu Map	
	Configuration (DMX)	12
	DMX Personalities.	12
	DMX Control	
	DMX Values	13
	V. 1 0 1 1 1 1 1	
	Virtual Color Wheel	15
	Virtual Color Wheel Chart	
	Configuration (Standalone)	16
	Configuration (Standalone)	
	Auto Programs Red Shift	16
	Master/Slave	
	White Balance	
	Virtual Color Wheel	<u>17</u>
	Color Temperature	17
	Manual Color Mixer	17
	Dimmer Curve	17
	Dimmer Profiles	
	White Balance	17



	LED Francisco	10
	LED FrequencyBack Light	10
	Back Light	10
	System Information	18
	Factory Reset	18
	Technical Information	19
	Product Maintenance	19
<b>6.</b> <sup>-</sup>	Technical Specifications	20
Re	turns	21
	ntact Us	



# 1. Before You Begin

## What Is Included

- Ovation CYC 1 FC
- Seetronic<sup>®</sup> Powerkon<sup>®</sup> power cord
- Omega brackets with mounting hardware
- Quick Reference Guide

### **Claims**

Carefully unpack the product immediately and check the container to make sure all the parts are in the package and are in good condition.

If the box or the contents (the product and included accessories) appear damaged from shipping, or show signs of mishandling, notify the carrier immediately, not Chauvet. Failure to report damage to the carrier immediately may invalidate your claim. In addition, keep the box and contents for inspection.

For other issues, such as missing components or parts, damage not related to shipping, or concealed damage, file a claim with Chauvet within 7 days of delivery.

## **Manual Conventions**

Convention	Meaning
1–512	A range of values
50/60	A set of values of which only one can be chosen
<set></set>	A button on the product's control panel
Settings	A product function or a menu option

## **Symbols**

Symbol	Meaning
A	Electrical warning. Not following these instructions may cause electrical damage to the product, accessories, or the user.
<u></u>	Critical installation, configuration, or operation information. Not following these instructions may make the product not work, cause damage to the product, or cause harm to the operator.
<b>(i)</b>	Important installation or configuration information. The product may not function correctly if this information is not used.
	Useful information.



Any reference to data or power connections in this manual assumes the use of Seetronic $^{\otimes}$  Powerkon $^{\otimes}$  cables.



The term "DMX" used throughout this manual refers to the USITT DMX512-A digital data transmission protocol.

# **FCC Compliance**

This device complies with Part 15 Part B of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## **Expected LED Lifespan**

Over time, use and heat will gradually reduce LED brightness. Clustered LEDs produce more heat than single LEDs, contributing to shorter lifespans if always used at full intensity. The average LED lifespan is 40,000 to 50,000 hours. To extend LED lifespan, maintain proper ventilation around the product, and limit the overall intensity.



## **Safety Notes**

Read all the following safety notes before working with this product. These notes contain important information about the installation, usage, and maintenance of this product.



This product contains no user-serviceable parts. Any reference to servicing in this User Manual will only apply to properly trained, certified technicians. Do not open the housing or attempt any repairs.



All applicable local codes and regulations apply to proper installation of this product.

## **Personal Safety**

- Avoid direct eye exposure to the light source while the product is on.
- Always disconnect the product from the power source before cleaning or replacing the fuse.
- Always connect the product to a grounded circuit to avoid the risk of electrocution.
- Do not touch the product's housing when operating because it may be very hot.

### Mounting and Rigging

- The luminaire is intended for professional use only.
- This product is not intended for permanent installation.
- This product is for indoor use only! To prevent risk of fire or shock, do not expose this product to rain or moisture. (IP20)
- CAUTION: When transferring product from extreme temperature environments, (e.g. cold truck to warm humid ballroom) condensation may form on the internal electronics of the product. To avoid causing a failure, allow product to fully acclimate to the surrounding environment before connecting it to power.
- Mount this product in a location with adequate ventilation, at least 20 in (50 cm) from adjacent surfaces.
- The luminaire should be positioned so that prolonged staring into the luminaire at a distance closer than 2.3m (230 cm) is not expected.
- Make sure there are no flammable materials within 0.2 m (20 cm) of this product while it is operating.
- When hanging this product, always secure to a fastening device using a safety cable.
- Never carry the product by the power cord.

### **Power and Wiring**

- Make sure the power cord is not crimped or damaged.
- Always make sure you are connecting this product to the proper voltage in accordance with the specifications in this manual or on the product's specification label.
- To eliminate unnecessary wear and improve its lifespan, during periods of non-use completely disconnect the product from power via breaker or by unplugging it.
- Never connect this product to a dimmer pack or rheostat.
- Make sure to replace the fuse with another of the same type and rating.
- Never disconnect this product by pulling or tugging on the power cable.
- If the external flexible cable or cord of this luminaire is damaged, it shall be replaced by a special cord or cord exclusively available from the manufacturer or his service agent.
- The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.

## Operation

- Do not operate this product if there is damage on the housing, lenses, or cables. Have the damaged parts replaced by an authorized technician at once.
- Do not cover the ventilation slots when operating to avoid internal overheating.
- The maximum ambient temperature is 113 °F (45 °C). Do not operate the product at higher temperatures.
- In the event of a serious operation problem, stop using this product immediately!



If your Chauvet product requires service, contact Chauvet Technical Support.



## 2. Introduction


## **Description**


The Ovation CYC 1 FC is a sleek, discreet, and lightweight cyclorama wash that delivers a wide, smooth field of light with significant reach. The unit is completely convection cooled, making it ideal for applications where silent operation is critical. The Ovation CYC 1 FC features the advanced RGBAL color-mixing system found in other Chauvet full-color Ovation units to render nearly any color with hyper-realism and saturation. Its low profile makes it perfect for use as a foot-light. The versatile fixture has an integrated kickstand and a glare shield that can adjust and shape its throw.

### **Features**

- · Low-profile and lightweight cyclorama wash or footlight fixture
- Display a full spectrum of hues with RGBAL LEDs for theater, film, and production
- · Theater-ready with 16-bit dimming of master dimmer and individual colors
- Beam modification with built-in kickstand and adjustable glare shield
- Flat, even field of light with superior color mixing
- Virtual color wheel with color matched to popular gel colors and color temperature presets
- RDM (Remote Device Management) for added flexibility
- Adjustable PWM (Pulse Width Modulation) to avoid flickering on camera
- Silent operation for use in studio and theater applications


#### **Product Overview**

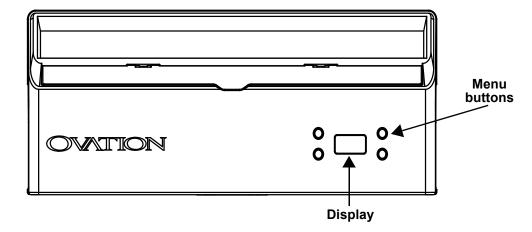


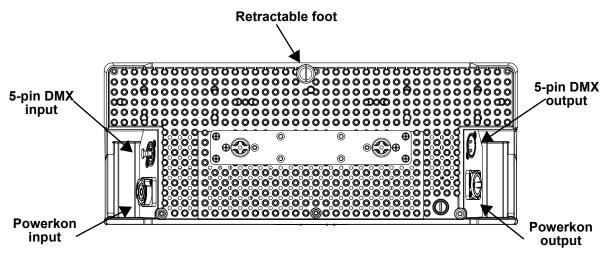



## **Product Dimensions**

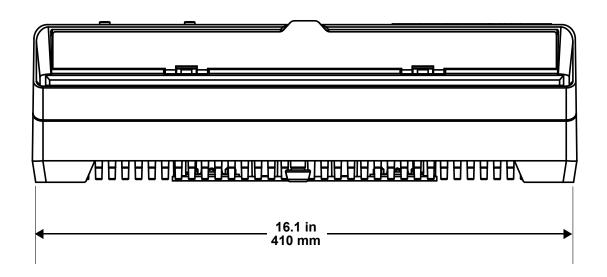

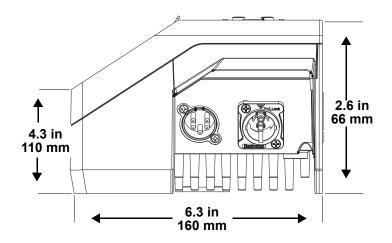



# 3. Setup

### **AC Power**

Each Ovation CYC 1 FC has an auto-ranging power supply that works with an input voltage range of 100 to 240 VAC, 50/60 Hz. To determine the power requirements for each Ovation CYC 1 FC, refer to the label affixed to the product or to the <u>Technical Specifications</u> chart in this manual.

The listed current rating indicates the maximum current draw during normal operation. For more information, download Sizing Circuit Breakers from the Chauvet website: <a href="https://www.chauvetprofessional.com">www.chauvetprofessional.com</a>.



- Always connect the product to a protected circuit (fuse or circuit breaker). Make sure the product has an appropriate electrical ground to avoid the risk of electrocution or fire.
- To eliminate unnecessary wear and improve its lifespan, during periods of non-use completely disconnect the product from power via breaker or by unplugging it.



Never connect the product to a rheostat (variable resistor) or dimmer circuit, even if the rheostat or dimmer channel serves only as a 0 to 100% switch.

### **AC Plug**

The Ovation CYC 1 FC comes with a power input cord terminated with a Seetronic<sup>®</sup> Powerkon<sup>®</sup> A connector on one end and an Edison plug on the other end (U.S. market). If the power input cord that came with the product has no plug or if the plug needs to be changed, use the table below to wire the new plug.

Connection	Wire (U.S.)	Wire (Europe)	Screw Color
AC Live	Black	Brown	Yellow or Brass
AC Neutral	White	Blue	Silver
AC Ground	Green/Yellow	Green/Yellow	Green

## **Power Linking**

The product supports power linking. You can power link up to 12 Ovation CYC 1 FC products at 120 V, up to 21 products at 208 V, or up to 23 products at 230 V. The Ovation CYC 1 FC comes with a power input cord. Power-linking cables are available for purchase from Chauvet.



## **DMX Linking**

The Ovation CYC 1 FC can be linked to a DMX controller using a 5-pin DMX connection. If using other DMX-compatible products with this product, each can be controlled individually with a single DMX controller.

#### **DMX Personalities**

The Ovation CYC 1 FC uses a 5-pin DMX data connection for its nine DMX personalities **1Ch**, **3Ch**, **5Ch**, **7Ch**, **10Ch**, **13Ch**, **13Ch**, **16Ch**, and **HSV**:

- Refer to the Introduction for a brief description of each DMX personality.
- Refer to the <u>Operation</u> chapter to learn how to configure the Ovation CYC 1 FC to work in these
  personalities.
- The <u>DMX Values</u> section provides detailed information regarding the DMX personalities.



If you are not familiar with or need more information about DMX standards, Master/Slave connectivity, or the DMX cables needed to link this product to a DMX controller, download the DMX Primer from the Chauvet website: <a href="https://www.chauvetprofessional.com">www.chauvetprofessional.com</a>.

#### **Master/Slave Connectivity**

The Master/Slave mode allows a Ovation CYC 1 FC (the master) to control one or more Ovation CYC 1 FC products (the slaves) without a DMX controller. One Ovation CYC 1 FC becomes the master when running in auto show or VCW modes.

Each slave's control panel must be configured to operate in Slave mode. During Master/Slave operation, the slaves will operate in unison with the master.



DO NOT connect a DMX controller to products operating in Master/Slave mode. The DMX controller signals may interfere with the signals from the master.



- The <u>Operation</u> section of this manual provides detailed instructions on how to configure the master and slaves.
- For more information about DMX standards or the DMX cables needed to link this product to a DMX controller, download the DMX Primer from the Chauvet website: <a href="https://www.chauvetprofessional.com">www.chauvetprofessional.com</a>.

### Remote Device Management (RDM)

Remote Device Management, or RDM, is a standard for allowing DMX-enabled devices to communicate bi-directionally along existing DMX cabling. Check the DMX controller's User Manual or with the manufacturer, as not all DMX controllers have this capability. The Ovation CYC 1 FC supports RDM protocol that allows feedback to make changes to menu map options.



## Mounting

Before mounting the product, read and follow the safety recommendations indicated in the Safety Notes. For CHAUVET Professional line of mounting clamps, go to <a href="https://www.trusst.com/products">www.trusst.com/products</a>.

#### Orientation

Always mount this product in a safe position, making sure there is adequate room for ventilation, configuration, and maintenance.

## Rigging


Chauvet recommends using the following general guidelines when mounting this product:

- Before deciding on a location for the product, make sure there is easy access to the product for maintenance and programming purposes.
- Make sure that the structure onto which you are mounting the product can support the product's weight. See the <u>Technical Specifications</u> for weight information.
- When mounting the product overhead, always use a safety cable. Mount the product securely to a rigging point, whether an elevated platform or a truss.
- When rigging the product onto a truss, use a mounting clamp of appropriate weight capacity.
- When power linking multiple products, mount the products close enough for power-linking cables to reach.
- The bracket adjustment knobs allow for directional adjustment when aiming the product to the desired angle. Only loosen or tighten the bracket knobs manually. Using tools could damage the knobs.

#### **Procedure**

The Ovation CYC 1 FC comes with a double-bracketed yoke to which mounting clamps can be attached for hanging or simply use as a floor stand. Mounting clamps are sold separately. Make sure the clamps are capable of supporting the weight of this product. Use at least one mounting point per product. For the CHAUVET Professional line of mounting clamps, go to <a href="https://www.trusst.com/products">www.trusst.com/products</a>.

#### **Mounting Diagram**

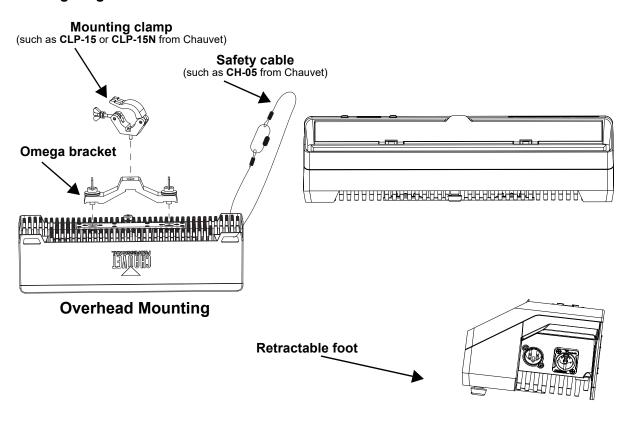

**Floor Mounting** 



# 4. Operation

## **Control Panel Operation**

Button	Function				
<menu></menu>	Exits from the current menu or function				
<b>Enables</b> the currently displayed menu or sets the currently selected value in to the c function					
<up></up>	Navigates upward through the menu list or increases the numeric value when in a function				
<down></down>	Navigates downward through the menu list or decreases the numeric value when in a function				

## **Control Options**

Set the Ovation CYC 1 FC starting address in the 001-512 DMX range. This enables control of up to 23 products in the 16-channel personality.

## **Programming**

Refer to the Menu Map to understand the menu options. The menu map shows the main level and a variable number of programming levels for each option.

- To go to the desired main level, press **<MENU>** repeatedly until the option shows on the display. Press **<ENTER>** to select. This will take you to the first programming level for that option.
- To select an option or value within the current programming level, press <UP> or <DOWN> until
  the option shows on the display. Press <ENTER> to select. In this case, if there is another
  programming level, you will see that first option, or you will see the selected value.
- Press <MENU> repeatedly to exit to the previous main level.



## Menu Map

Refer to the Ovation CYC 1 FC product page on <a href="https://www.chauvetprofessional.com">www.chauvetprofessional.com</a> for the latest menu map

Main Level		Programmi	ng Levels	Description	
Start Address		001–5	512*	Selects starting address (*highest channel restricted to personality chosen)	
		Virtual Co	Color Wheel		1-channel: dimmer, - See <u>Virtual Color Wheel Chart</u>
		Color Ten	nperature		See Color Temperature Chart
	1Ch		Red		
	TCH	Manual	Green		Combine red, green, blue, amber,
		Manual Color Mixer	Blue	0–255	and lime to make custom color (0-
		OOIOI MIXCI	Amber		100%)
			Lime		
		3C	h	3-channel: Dimmer, virtual color wheel, color temperature	
		5C	h	5-channel: RGBAL	
DMX		7C	h	7-channel: Dimmer, RGBAL, strobe	
Channel -		100	ch .	10-channel: 16-bit dimmer, RGBAL, strobe, virtual color wheel, color temperature	
	12Ch				12-channel: Dimmer, RGBAL, strobe, virtual color wheel, color temperature, auto programs, auto speed, control
		130	h	13-channel: 16-bit dimmer, 16-bit RGBAL, strobe	
	16Ch				16-channel: 16-bit dimmer, 16-bit RGBAL, strobe, virtual color wheel, color temperature, control
		HS	V	3-channel: HSV control	



Main Level		Programming Levels		Description
		C3050 - Md Yellow		
		C3040 - Lt Yellow		
		C3240 - Amb Yellow		
		C2340 - VLt Amber		
		C2040 - Lt Amber		
		C2050 - Md Amber		
		C2060 - Dk Amber		
		C1050 - Lt Red		
		C1080 - Md Red		
		C1020 - NC Pink		
		C1030 - Md Pink		
		C1630 - Dk Pink		
		C1250 - Md Red Amber		
		C1060 - Dk Red Amber		
	Virtual Color	C1650 - Magenta		Virtual Color Wheel simulates the output of each gel color. Refer to the
	Wheel	C6170 - Dk Magenta		Virtual Color Wheel Chart for specific
		C6020 - Lt Lavender		values.
		C5030 - Lt Blue		
		C5020 - VLt Blue		
		C5430 - Lt Blue 2		
		C5070 - Blue		
Virtual		C5050 - Md Blue		
Color		C5060 - Dk Blue	Dimmer 000–255	
Wheel		C5690 - Indigo	000-233	
		C5080 - VDk Blue		
		C5081 - VDk Blue 2		
		C4370 - Yel Green C4070 - Green		
		C4550 - Turquoise		
		C4550 - Turquoise C4560 - Aqua		
		C4560 - Aqua C4570 - Blue Green		
		2800K		
		3000K		
		3200K		
		3500K		Preset white color temperatures.
	Color	4000K		Emulates a tungsten lamp at the
	Temperature	4500K		specified color temperature. Refer to
		5000K		the <u>Color Temperature Chart</u> section for specific values.
		5600K		·
		6000K		
		6500K		
		Red		
		Green		Combine red, green, blue, amber,
	Manual Color Mixer	Blue		and lime to make a custom color (0-
	MIVEL	Amber		100%)
		Lime		



Main Level		Programmi	Description			
Virtual	Off				Turns off the fade transition between colors	
Virtual Color	Color X-Fade	X-	-Fade Speed	11	Creates fade transition between	
Wheel	Speed	X-	-Fade Speed	12	colors when using colors in the Virtual Color Wheel or Color	
(cont)		X-	-Fade Speed	13	Temperature chart, from fast ( <b>X-Fade</b>	
		X-	-Fade Speed	14	Speed 1) to slow (X-Fade Speed 4)	
	Auto	Auto 1				
	Auto	2				
<b>Auto Show</b>	Auto	3	Speed	001–100	Selects automatic programs and auto program speed	
	Auto	0 4			program speed	
	Auto	5				
Red Shift		Or	1		Turns on or off Red Shift (amber	
Reu Siiit		Of	f		LEDs imitate lamp when dimming)	
Master/		Mas	ter		Master mode	
Slave		Slav	ve		Slave mode	
		S Cu	rve			
Dimmer		Line	ear		Set the dimmer curve	
Curve		Index C	Curve			
		Log C	urve			
		Of	f	Linear dimmer		
Dimmer		Dimm	er 1	Fast dimmer curve		
Mode		Dimm	er 2	Medium dimmer curve		
		Dimm	Slow dimmer curve			
	Off				Uses factory default white setting	
		Red			Sets red LED maximum value	
White	Manual	Gre	en	125–255	Sets green LED maximum value	
Balance		Bl				
			ber		Sets amber LED maximum value	
			ne		Sets lime LED maximum value	
		600Hz				
		1200				
LED		2000		Selects the PWM output frequency		
Frequency		4000				
		6000				
		25K	Hz			
		108	S		Turns off display backlight after 10 seconds of inactivity	
Back Light		309	S	Turns off display backlight after 30 seconds of inactivity		
		2Mi		Turns off display backlight after 2 minutes of inactivity		
		Alway	s On	Display backlight always on		
	Fixture			_ H	Shows total product hours	
Information	LED H			_H	Shows total LED hours	
	Vers		V <sub>-</sub>		Shows installed software version	
	UII				Shows product UID	
Factory		No			Reset to factory defaults	
Reset		Ye	S	and the second second		



## **Configuration (DMX)**

Use DMX configurations to operate the product with a DMX controller.

#### **DMX Personalities**

This setting allows you to choose a particular DMX personality.

- 1. Go to the **DMX Channel** main level.
- 2. Select the desired personality (1Ch, 3Ch, 5Ch, 7Ch, 10Ch, 12Ch, 13Ch, 16Ch, or HSV).



- See the <u>DMX Control</u> section for the highest starting address you can select for each personality.
- Make sure that the starting addresses on the various products do not overlap due to the new personality setting.

#### DMX Control

In this mode, each product will respond to a unique starting address from the DMX controller. All products with the same starting address will respond in unison.

- 1. Select a DMX personality as shown in DMX Personalities.
- 2. Set the running mode:
  - a. Go to the Master/Slave main level
  - b. Select the Master programming level
- 3. Set the starting address:
  - a. Go to Start Address main level.
  - b. Select the starting address (001–512).

The highest recommended starting address for each DMX personality is as follows:

DMX Personality	Starting Address
16Ch	497
13Ch	500
12Ch	501
10Ch	503
7Ch	506
5Ch	508
3Ch	510
1Ch	512
HSV	510



## **DMX Values**

## 16Ch/ 13Ch / 12Ch / 10Ch / 7Ch / 5CH

5Ch	7Ch	10Ch	12Ch	13Ch	16Ch	Function	Value	Percent/Setting
-	1	1	1	1	1	Dimmer	000 ⇔ 255	0–100%
_	-	2	-	2	2	Dimmer Fine	000 ⇔ 255	0–100%
1	2	3	2	3	3	Red	000 ⇔ 255	0–100%
_	-	_	-	4	4	Red Fine	000 ⇔ 255	0–100%
2	3	4	3	5	5	Green	000 ⇔ 255	0–100%
_	-	_	-	6	6	Green Fine	000 ⇔ 255	0–100%
3	4	5	4	7	7	Blue	000 ⇔ 255	0–100%
_	-	_	-	8	8	Blue Fine	000 ⇔ 255	0–100%
4	5	6	5	9	9	Amber	000 ⇔ 255	0–100%
_	-	_	-	10	10	Amber Fine	000 ⇔ 255	0–100%
5	6	7	6	11	11	Lime	000 ⇔ 255	0–100%
_	-	_	-	12	12	Lime Fine	000 ⇔ 255	0–100%
	7	8	7	13	13	Strobe	000 😂 010	No function
_	1	0	′	13	13	Strone	011 ⇔ 255	Strobe, slow to fast
-	-	9	8	-	14	Virtual Color Wheel	000 ⇔ 255	Refer to the <u>Virtual Color Wheel</u> <u>Chart</u> section for specific values
-	-	10	9	-	15	Color Temperature	000 ⇔ 255	Refer to the <u>Color Temperature</u> <u>Chart</u> section for specific values
-	_	_	10	_	_	Auto Program	000 ⇔ 010 011 ⇔ 060 061 ⇔ 110 111 ⇔ 160 161 ⇔ 210	Auto 2 Auto 3
	_	_	11	_	_	Auto Speed	211⇔ 255	Auto 5 (Auto 1-4) Auto speed, slow to fast
			• • • • • • • • • • • • • • • • • • • •			Auto Opeca		•
_	_	_	12	_	16	Control (hold for 3 seconds)	008 ⇔ 015 016 ⇔ 023 024 ⇔ 039 040 ⇔ 047 048 ⇔ 055 056 ⇔ 063 064 ⇔ 071 072 ⇔ 079 080 ⇔ 087 088 ⇔ 095 096 ⇔ 103 104 ⇔ 111 112 ⇔ 119 120 ⇔ 127 128 ⇔ 135	No function Dimmer reset Red shift on Red shift off S-curve dimmer Linear dimmer Index dimmer curve Logarithmic dimmer curve Dimmer speed mode OFF Dimmer speed 1 (fastest) Dimmer speed 2 Dimmer speed 3 (slowest) X-Fade Speed: OFF X-Fade Speed: 1 (fastest) X-Fade Speed: 2 X-Fade Speed: 3 X-Fade Speed: 4 (slowest) Reserved for future use



## 3Ch

3Ch	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0–100%
2	Virtual Color Wheel	000 ⇔ 255	Refer to the <u>Virtual Color Wheel Chart</u> section for specific values
3	Color Temperature	000 ⇔ 255	Refer to the Color Temperature Chart section for specific values

## 1Ch

Channel	Function	Value	Percent/Setting
1	Hue	000 ⇔ 255	0–100% (color set through menu)

## HSV

Channel	Function	Value	Percent/Setting
1	Hue	000 ⇔ 255	0–100%
2	Saturation	000 ⇔ 255	0–100%
3	Value	000 ⇔ 255	0–100%



### Virtual Color Wheel

The Ovation CYC 1 FC includes a feature called the Virtual Color Wheel (VCW). This feature is available as a standalone control mode for manual use and as a control channel in select DMX personalities. More than 30 premixed colors, custom blended by Chauvet engineers, are available to call up for easier programming. The DMX values used to mix these colors are provided below. The overall intensity of the Ovation fixture can be adjusted to more closely replicate familiar colors. A chart is available on Chauvet website <a href="https://www.chauvetprofessional.com">www.chauvetprofessional.com</a> to compare Chauvet's pre-mixed colors with popular gel colors. This chart is for comparison purposes only and is not a representation that Chauvet pre-mixed colors match any of the gel colors listed.

#### Virtual Color Wheel Chart

Virtual Color Wileer Chart						
<b>DMX Value</b>	Display Readout	Red Value	Green Value		Amber Value	
000 🗢 005		000	000	000	000	000
006 ⇔ 013	C3050 - Md Yellow	246	195	028	176	212
014 🗢 021	C3040 - Lt Yellow	251	175	043	203	203
022 🗢 028	C3240 - Amb Yellow	227	185	002	235	191
029 👄 035	C2340 - VLt Amber	255	143	064	085	175
036 👄 043	C2040 - Lt Amber	255	169	063	219	070
044 👄 051	C2050 - Md Amber	255	162	006	244	136
052 ⇔ 059	C2060 - Dk Amber	250	126	031	243	119
060 ⇔ 067	C1050 - Lt Red	255	080	038	050	029
068 ⇔ 075	C1080 - Md Red	215	005	033	002	002
076 ⇔ 083	C1020 - NC Pink	255	129	105	250	222
084 🗢 091	C1030 - Md Pink	255	064	104	217	238
092 ⇔ 099	C1630 - Dk Pink	255	068	106	245	252
100 ⇔ 107	C1250 - Md Red Amber	255	049	046	164	108
108 ⇔ 115	C1060 - Dk Red Amber	255	015	058	167	000
116 <code-block></code-block>	C1650 - Magenta	255	020	105	255	132
122 ⇔ 130	C6170 - Dk Magenta	255	000	106	009	101
131 ⇔ 138	C6020 - Lt Lavender	255	202	117	017	227
139 ⇔ 146	C5030 - Lt Blue	177	255	169	219	230
147 ⇔ 154	C5020 - VLt Blue	190	225	152	238	235
155 ⇔ 162	C5430 - Lt Blue 2	101	255	153	218	137
163 ⇔ 170	C5070 - Blue	048	175	155	000	124
171 ⇔ 178	C5050 - Md Blue	127	187	138	081	136
179 ⇔ 186	C5060 - Dk Blue	082	217	218	154	219
187 ⇔ 194	C5690 - Indigo	100	000	160	000	000
195 ⇔ 202	C5080 - VDk Blue	055	150	150	000	020
203 <code-block> 210</code-block>	C5081 - VDk Blue 2	015	100	092	035	030
211 <code-block></code-block>	C4370 - Yel Green	020	123	025	049	051
219 <code-block> 226</code-block>	C4070 - Green	047	094	032	043	039
227 <code-block> 234</code-block>	C4550 - Turquoise	091	180	084	123	175
235 <code-block> 242</code-block>	C4560 - Aqua	063	147	075	094	133
243 <code-block> 250</code-block>	C4570 - Blue Green	043	170	073	043	087
251 ⇔ 255		000	000	000	000	000



The colors above are simulated renditions of the color output produced compared with other similar incandescent products. Chauvet makes no guarantee of the color output accuracy.



### **Color Temperature Chart**

DMX Value	Display Readout	Red Value	Green Value	Blue Value	Amber Value	Lime Value
000 ⇔ 005		000	000	000	000	000
006 ⇔ 025	2800K	185	160	90	248	180
026 ⇔ 050	3200K	190	180	102	148	180
051 ⇔ 075	3500K	200	194	111	249	180
076 ⇔ 100	4000K	195	204	122	249	180
101 ⇔ 125	4500K	195	212	132	249	187
126 ⇔ 150	5000K	195	219	140	249	187
151 ⇔ 175	5600K	200	229	148	251	181
176 ⇔ 200	6000K	181	230	152	252	182
201  225	6500K	180	233	157	252	182
226 ⇔ 255		000	000	000	000	000



The color temperatures above are simulated renditions of the color output produced compared with a tungsten lamp at the specified color temperature. Chauvet makes no guarantee of the color output accuracy.

## **Configuration (Standalone)**

Use standalone configuration to operate the product without a DMX controller.

### **Auto Programs**

Auto programs allow for dynamic RGBAL color mixing without a DMX controller.

- 1. Go to the **Auto Show** main level.
- 2. Select the desired auto (Auto 1-5).
- 3. Select the desired speed (Speed 001-100).



The auto programs cannot be edited.

#### Red Shift

The Red Shift function allows the light in the fixture to mimic halogen lamp dimming. To enable or disable the Red Shift function:

- 1. Go to the Red Shift main level.
- 2. Select from On (enables Red Shift) or Off (disables Red Shift).

#### Master/Slave

The Master/Slave mode allows a group of Ovation CYC 1 FC products (the slaves) to simultaneously duplicate the output of another Ovation CYC 1 FC (the master) without a DMX controller.

To set each of the slaves:

- 1. Go to the Master/Slave main level.
- 2. Select Slave.

To set the master:

- 1. Go to the Master/Slave main level.
- 2. Select Master.
- 3. Select an auto program (see Auto Programs or Virtual Color Wheel Chart).



- The master is the one that runs a program whether in Auto Program or VCW modes.
- Do not connect a DMX controller to the products configured for Master/Slave operation. The DMX controller may interfere with signals from the master.
- The master should be the first product in the daisy chain.



#### White Balance

This setting allows for selection of the white balance shown by the Ovation CYC 1 FC when the color setting is **RGBAL** and the DMX controller's red, green, blue, amber, and lime faders are set to **255**.

- 1. Go to the White Balance main level.
- Select Manual to continue to adjust the white balance or Off to default to the original factory setting.
- 3. Select a color (Red, Green, Blue, Amber or Lime).
- 4. Select a color value (125–255).
- 5. Repeat for the other colors.



The values of Red, Green, Blue, Amber and Lime configured will define the color temperature shown when the RGBAL faders are set to 255.

#### Virtual Color Wheel

The Virtual Color Wheel mode allows for preset popular colors RGBAL color mixing without a DMX controller.

- 1. Go to the Virtual Color Wheel main level.
- 2. Select Virtual Color Wheel.
- 3. Select the desired color from the Virtual Color Wheel Chart.
- 4. Press **<ENTER>** twice.
- 5. Select the **Dimmer** value (000–255).
- 6. Press **<ENTER>**.

### **Color Temperature**

The color temperature mode allows for permanent white color temperature presets without a DMX controller.

- 1. Go to the Virtual Color Wheel main level.
- 2. Select Color Temperature.
- 3. Select the **Dimmer** value (000–255).
- 4. Select the desired color temperature.

#### **Manual Color Mixer**

The Manual Color Mixer mode allows for permanent RGBAL color mixing without a DMX controller.

- 1. Go to the Virtual Color Wheel main level.
- 2. Select Manual Color Mixer.
- 3. Select the desired color (Red, Green, Blue, Amber, or Lime).
- 4. Select the color value (000-255).
- 5. Repeat for the other colors.

#### **Dimmer Curve**

To set the dimmer curve on the Ovation CYC 1 FC:

- 1. Go to the **Dimmer Curve** main level.
- 2. Select the dimmer curve (S Curve, Linear, Index Curve, or Log Curve).

#### Dimmer Profiles

This setting determines how fast the output of the Ovation CYC 1 FC changes when you modify the values of the red, green, blue, amber, lime, and dimmer faders. This setting provides four different options to simulate the dimming curve of an incandescent lighting product.

- Go to the **Dimmer Mode** main level.
- Select a dimmer curve (OFF, Dimmer 1, Dimmer 2, or Dimmer 3).



OFF: The output is proportional (linear) to the dimmer and RGBAL channel values.

**Dimmer 1-3:** The output follows the dimmer and RGBAL channel values based on the corresponding dimmer curve, DIM1 being the fastest.

#### White Balance

This function allows users to manually configure the white balance settings

- 1. Go to the White Balance main level.
- 2. Select **Off** (factory-default white setting) or **Manual** (manually adjust RGBAL settings).
- 3. For Manual settings, select the desired color (Red, Green, Blue, Amber, or Lime).
- 4. Select the color value (125-255).
- 5. Repeat for the other colors.



### **LED Frequency**

This option changes the Pulse Width Modulation (PWM) frequency of the LEDs on the Ovation CYC 1 FC.

- 1. Go to the **LED Frequency** main level.
- 2. Select PWM Frequency (600Hz, 1200Hz, 2000Hz, 4000Hz, 6000Hz, or 25Khz).

#### **Back Light**

This setting allows for the selection of the amount of time the backlight on the Ovation CYC 1 FC's display stays on after the last button is pressed on the control panel.

- 1. Go to the **Back Light** main level.
- 2. Select 10S (10 seconds), 30S (seconds), 2Min (2 minutes), or On (remains on).

### System Information

The information section of the menu displays statistics and the current status of the product's various functions. To view these information sections:

- 1. Go to the **Information** main level.
- 2. Select which information to view, from **Fixture Hours** (displays the total number of hours the product has been turned on), **LED Hours** (displays the total number of hours the LEDs have been powered on), **Version** (displays the installed software version), or **UID** (displays the product's UID number).

### **Factory Reset**

This option restores the Ovation CYC 1 FC to the original factory settings.

- 1. Go to the **Factory Setting** main level.
- 2. Select Yes (resets the product configuration to default factory settings) or No (cancel).



# 5. Technical Information

### **Product Maintenance**

To maintain optimum performance and minimize wear, clean this product frequently. Usage and environment are contributing factors in determining the cleaning frequency.

Clean this product at least twice a month. Dust build-up reduces light output performance and can cause overheating. This can lead to reduced light source life and increased mechanical wear.

To clean the product:

- 1. Unplug the product from power.
- 2. Wait until the product is at room temperature.
- Use a vacuum (or dry compressed air) and a soft brush to remove dust collected on the external vents.
- 4. Clean all transparent surfaces with a mild soap solution, ammonia-free glass cleaner, or isopropyl alcohol.
- 5. Apply the solution directly to a soft, lint-free cotton cloth or a lens-cleaning tissue.
- 6. Softly drag any dirt or grime to the outside of the transparent surface.
- 7. Gently polish the transparent surfaces until they are free of haze and lint.



Always dry the transparent surfaces carefully after cleaning them.



# 6. Technical Specifications

## **Dimensions and Weight**

Length	Width	Height	Weight
16.14in (410 mm)	6.29 in (160 mm)	4.33 in (110 mm)	9 lb (4.2 kg)

Note: Dimensions in inches are rounded.

#### **Power**

Power Supply Type Switching (internal)	<b>Range</b> 100 to 240 VAC, 50/60 Hz		Voltage Selection Auto-ranging	
Parameter	120 V, 60 Hz	208 V, 60 Hz	230 V, 50 Hz	
Consumption	138 W	135 W	137 W	
Operating current	1.13 A	0.65 A	0.58 A	
Power-linking current (products)	13.6 A (12 products)	13.6 A (21 products)	13.6 A (23 products)	
" Fuse	T 2 A, 250 V	T 2 A, 250 V	T 2 A, 250 V	

Power I/O	U.S./Worldwide	UK/Europe
Power input connector	Seetronic <sup>®</sup> Powerkon <sup>®</sup> A	Seetronic <sup>®</sup> Powerkon <sup>®</sup> A
Power output connector	Seetronic <sup>®</sup> Powerkon <sup>®</sup> B	Seetronic <sup>®</sup> Powerkon <sup>®</sup> B
Power cord plug	Edison (U.S.)	Local plug

## **Light Source**

Туре	Color	Quantity	Power	Current	Lifespan
LED	Red	12	1.75 to 4.57 W	1.4 A	50,000 hours
LED	Green	12	1.75 to 4.57 W	1.4 A	50,000 hours
LED	Blue	12	1.75 to 4.57 W	1.4 A	50,000 hours
LED	Amber	12	1.75 to 4.57 W	1.4 A	50,000 hours
LED	Lime	12	1.75 to 4.57 W	1.4 A	50,000 hours

#### **Photometrics**

Color Temperature	Beam Angle	Field Angle	Illuminance @ 5 m
2800K to 6500K	85° x 81°	128° x 142°	200 lux

#### **Thermal**

Maximum External Temperature	Cooling System
·	ocoming oyotom
113 °F (45 °C)	Convection
110 1 (10 0)	CONTOCUON

#### **DMX**

I/O Connector	Channel Range
5-pin XLR	1, 2, 5, 7, 10, 12, 13, 16, HSV

## Ordering

Product Name	Item Name	Item Code	UPC Number
Ovation CYC 1 FC	OVATIONCYC1FC	03031583	781462219314









## Returns

Send the product prepaid, in the original box, and with the original packing and accessories. Chauvet will not issue call tags.

Call Chauvet and request a Return Merchandise Authorization (RMA) number before shipping the product. Be prepared to provide the model number, serial number, and a brief description of the cause(s) for the return.

To submit a service request online, go to <a href="https://www.chauvetprofessional.com/service-request">www.chauvetprofessional.com/service-request</a>.

Clearly label the package with an RMA number. Chauvet will refuse any product returned without an RMA number.



Write the RMA number on a properly affixed label. DO NOT write the RMA number directly on the box.

Once you have the RMA number, provide the following information on a piece of paper and place it inside the box:

- Your name
- Your address
- Your phone number
- RMA number
- A brief description of the problem

Be sure to pack the product properly. Any shipping damage resulting from inadequate packaging will be your responsibility. FedEx packing or double-boxing are recommended.



Chauvet reserves the right to use its own discretion to repair or replace returned product(s).



# **Contact Us**

General Information	Technical Support
Chauvet World Headquarters	
Address: 5200 NW 108th Ave.	Voice: (844) 393-7575
Sunrise, FL 33351	Fax: (954) 756-8015
Voice: (954) 577-4455	Email: chauvetcs@chauvetlighting.com
Fax: (954) 929-5560	
Toll Free: (800) 762-1084	Website: www.chauvetprofessional.com
Chauvet U.K.	
Address: Unit 1C	Email: <u>UKtech@chauvetlighting.eu</u>
Brookhill Road Industrial Estate	
Pinxton, Nottingham, UK	Website: www.chauvetprofessional.eu
NG16 6NT	
Voice: +44 (0) 1773 511115	
Fax: +44 (0) 1773 511110	
Chauvet Benelux	
Address: Stokstraat 18	Email: BNLtech@chauvetlighting.eu
9770 Kruishoutem	
Belgium	Website: www.chauvetprofessional.eu
Voice: +32 9 388 93 97	
Chauvet France	
Address: 3, Rue Ampère 91380 Chilly-Mazarin	Email: FRtech@chauvetlighting.fr
France	Website: www.chauvetprofessional.eu
Voice: +33 1 78 85 33 59	
Chauvet Germany	
Address: Bruno-Bürgel-Str. 11 28759 Bremen	Email: <u>DEtech@chauvetlighting.de</u>
Germany	Website: www.chauvetprofessional.eu
Voice: +49 421 62 60 20	
Chauvet Mexico	
Address: Av. de las Partidas 34 - 3B (Entrance by Calle 2)	Email: servicio@chauvet.com.mx
Zona Industrial Lerma	Website: www.chauvetprofessional.mx
Lerma, Edo. de México, CP 52000	
Voice: +52 (728) 690-2010	

Visit the applicable website above to verify our contact information and instructions to request support. Outside the U.S., U.K., Ireland, Benelux, France, Germany, or Mexico, contact the dealer of record.